


Gas Sample Probe Series SP[®]

SP2000, SP2000-H, SP2300-H, SP2400-H

Serial number 10283 and higher

Instruction Manual
Version 1.01.01

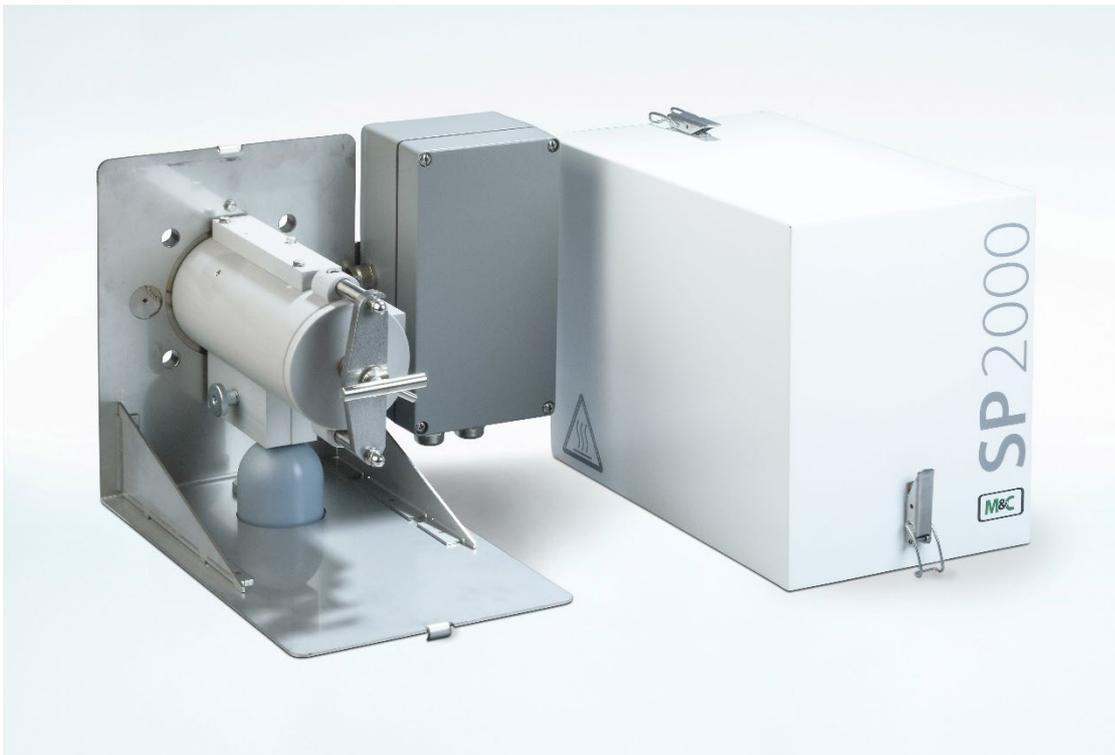

**Dear customer,**

Thank you for buying our product. In this instruction manual you will find all necessary information about this M&C product. The information in the instruction manual is fast and easy to find, so you can start using your M&C product right after you have read the manual.

If you have any question regarding the product or the application, please don't hesitate to contact M&C or your M&C authorized distributor. You will find all the addresses in the appendix of this manual.

For additional information about our products and our company, please go to M&C's website www.mc-techgroup.com. There you will find the data sheets and manuals of all our products in German and English.

This instruction manual does not claim completeness and may be subject to technical modifications.

© 03/2025 **M&C TechGroup** Germany GmbH. Reproduction of this document or its content is not allowed without permission from **M&C**.

With the release of this version all older manual versions will no longer be valid. The German instruction manual is the original instruction manual. In case of arbitration only the German wording shall be valid and binding.

SP® is a registered trade mark.

Version: 1.01.01

Contents

1	General Information.....	5
2	Declaration of Conformity	5
3	Safety Instructions.....	6
3.1	Intended Use.....	6
4	Warranty.....	6
5	Used Terms and Signal Indications.....	7
6	Introduction.....	9
7	Serial Number.....	9
8	Technical Data.....	10
9	Application	11
10	Description	11
11	Probe Design of the Heated Version	13
11.1	Sample Gas Connection	13
11.2	Temperature Controller.....	14
11.3	Sample tube and Pre-filter Possibilities	14
12	Receipt of Goods and Storage.....	17
13	Preparation for Installation.....	17
14	Mounting	18
14.1	Checking the Filter Element	19
14.2	Mounting of the Screwed Connector at the Sample Outlet.....	20
14.3	Mounting of Probe with Sample Tube or Pre-filter.....	21
14.4	Mounting of Heated Sample Line.....	23
14.5	Connection of Option Test Gas Feeding or Blow Back Line	24
14.6	Connection Option Pneumatic Drive MS1 or MS3.....	25
15	Electrical Connections.....	25
15.1	Standard Version with Internal Capillary Tube Thermostat	26
15.2	Version with Pt100 or Thermocouple (Option)	26
16	Preparations for Commissioning	28
17	Starting-up.....	29
17.1	Gas Sample Probe SP2300-H	29
17.2	Option Calibration Gas Feeding and Blow Back	30
17.2.1	Option Check Valve /R.....	30
17.2.2	Option 3/2 Way Ball Valve /3VA and /3VA320	31
17.3	Option Ball Valve Drives	31
17.3.1	Option Pneumatic Drive MS1 or MS3 when using a 2/2-Way Ball Valve /VA.....	31
17.3.2	Option Pneumatic Drive MS1 or MS3 when using a 3/2-Way Ball Valve /3VA.....	32
17.3.3	Option Electrical Ball Valve Drive	33
17.4	Option Solenoid Valve Units for Blow Back, Test Gas Feeding and Control of the Pneumatic Drives	33
17.4.1	Option Drive Unit 234B for the Solenoid Valve Units.....	36
18	Maintenance.....	39
18.1	Changing Filter Element and Checking Sealings.....	39
18.2	Change of the Optional Pre-filter	41
18.3	Change of Heating Cartridge and Thermostat.....	42
19	Switching Off	44
20	Proper Disposal of the Device	44
21	Spare Part List.....	45
22	Risk Assessment.....	46
23	Connection and Mounting Data.....	48
24	Appendix.....	49

List of illustrations

Figure 1	Design of basic version SP2000-H.....	13
Figure 2	Mounting possibilities SP2000..., SP2300-H, SP2400-H.....	18
Figure 3	Cross-sectional drawing SP2000-H.....	19
Figure 4	Removing the new filter housing lid.....	20
Figure 5	Mounting of screwed connector at sample outlet.....	20
Figure 6	Mounting of sample tube or pre-filter.....	22
Figure 7	Mounting of heated sample line.....	23
Figure 8	Connection test gas feeding or blow back line.....	24
Figure 9	Electrical connection for SP2000-H, SP2300-H and SP2400-H with thermostat controller.....	26
Figure 10	Electrical connection of external temperature controller e.g. 70304G.....	27
Figure 11	Electrical connection electronic controller 70304G.....	28
Figure 12	Calibration gas feeding.....	30
Figure 13	Pneumatic drive for 2/2-way ball valve.....	31
Figure 14	Pneumatic drive for 3/2-way ball valve.....	32
Figure 15	Electrical connection for electrical ball valve drive.....	33
Figure 16	Connections Solenoid Valve Unit 2.....	34
Figure 17	Connections solenoid valve unit 3.....	35
Figure 18	Wiring plan of control unit 234B.....	38
Figure 19	Filter elements and gaskets.....	40
Figure 20	Position of Thermostat and heating cartridge.....	42
Figure 21	Position of fixing screws: connection box, thermostat sensor, heating cartridge carrier plate.....	43
Figure 22	Dismounted electrical connection box with heating cartridge and thermostat sensor.....	43
Figure 23	Adjustment of the mechanical stop at the thermostat controller.....	44
Figure 24	Overview risk assessment.....	46
Figure 25	SP2000-H basic version.....	50
Figure 26	SP2000-H with options.....	51
Figure 27	SP2300-H.....	52
Figure 28	SP2300-H filter elements.....	53
Figure 29	High temperature tube aluminium oxide AO.....	54
Figure 30	Heated sample tubes SP30-H.....	55
Figure 31	Test gas feeding and blow back possibilities.....	57
Figure 32	SP2000-H/3VA/MS-NC-B.....	58
Figure 33	SP2000-H/3VA/MS-NC-C.....	59
Figure 34	SP2000-H/3VA/MS-NO-B.....	60
Figure 35	SP2000-H/3VA/MS-NO-C.....	61

Head Office

M&C TechGroup Germany GmbH ♦ Rehhecke 79 ♦ 40885 Ratingen ♦ Germany

Telephone: 02102 / 935 - 0

E - mail: info@mc-techgroup.com

www.mc-techgroup.com

1 General Information

The product described in this instruction manual has been built and tested in our production facility.

All M&C products are packed to be shipped safely. To ensure the safe operation and to maintain the safe condition, all instructions and regulations stated in this instruction manual need to be followed. This instruction manual includes all information regarding proper transportation, storage, installation, operation and maintenance of this product by qualified personnel.

Follow all instructions and warnings closely.

Read this manual carefully before commissioning and operating the device. If you have any questions regarding the product or the application, please don't hesitate to contact M&C or your M&C authorized distributor.

2 Declaration of Conformity



CE - Certification

The product described in this operating manual complies with the following EU directives:

EMC-Instruction

The requirements of the EU directive 2014/30/EU "Electromagnetic compatibility" are met.

Low Voltage Directive

The requirement of the EU directive 2014/35/EU "Low Voltage Directive" are met.

The compliance with this EU directive has been examined according to DIN EN 61010.

Declaration of conformity

The EU Declaration of conformity can be downloaded from the **M&C** homepage or directly requested from **M&C**.



3 Safety Instructions

Follow these safety directions and instructions regarding installation, commissioning and operation of this equipment:

Read this manual before commissioning and operating the product. Please make sure to follow all safety instructions.

Installation and commissioning of electrical devices must be carried out only by qualified skilled personnel in compliance with the current regulations.

The installation and commissioning of the device must conform to the requirements of VDE 0100 (IEC 364) 'Regulations on the Installation of Power Circuits with Nominal Voltages below 1000V' and must be in compliance with all relevant regulations and standards.

Before connecting the device, please make sure to compare the supply voltage with the specified voltage on the product label.

Protection against damages caused by high voltages:

Disconnect the power supply before opening the device for access. Make sure that all external power supplies are disconnected.

Operate the device only in the permitted temperature and pressure ranges. For details please refer to the technical data sheet or manual.

Install the device only in protected areas, sheltered from rain, sun and moisture. The product should not be exposed to the elements.

This device is NOT certified to be installed or operated in explosive hazardous areas.

Installation, maintenance, inspections and any repairs of the devices must be carried out only by qualified skilled personnel in compliance with the current regulations.

3.1 Intended Use

The **SP2000** gas sample probe must be operated properly under the conditions described in chapter 8. Only use the **SP2000** in permissible temperature and pressure ranges.

Refrain from any use other than for this purpose.

Improper use can lead to serious injuries, see the safety instructions at the appropriate point.

4 Warranty

In case of a device failure, please contact immediately M&C or your M&C authorized distributor.

We have a warranty period of 12 months from the delivery date. The warranty covers only appropriately used products and does not cover the consumable parts. Please find the complete warranty conditions in our terms and conditions.

The warranty includes a free-of-charge repair in our production facility or the free replacement of the device. If you return a device to M&C, please be sure that it is properly packaged and shipped with protective packaging. The repaired or replaced device will be shipped free of delivery charges to the point of use.



5 Used Terms and Signal Indications



Danger

The 'Danger' warning sign indicates that death, serious injury and/or significant material damage will be the consequence, if the appropriate precautions should not be taken.



Warning

The 'Warning' warning sign indicates that death, serious injury or damage to property may occur if the relevant precautionary measures are not observed.



Caution

The 'Caution' warning sign indicates that slight personal injury can occur if the appropriate safety precautions are not observed.

Caution

Without the warning triangle means that a material damage **may occur** in case the respective safety measures are not met.

Attention

This means that an unintentional situation or an unintentional status **may occur** in case the respective note is not respected.



Toxic!
Danger to life if swallowed, in contact with skin or inhaled!
Do not swallow toxic substances, avoid skin contact and do not inhale toxic vapors. It is MANDATORY to take appropriate measures to reduce the risk and for personal protection.



Corrosive!
Risk of severe skin burns and serious eye damage! Living tissue and many materials are destroyed on contact with this chemical.
Do not inhale vapors and avoid contact with skin, eyes and clothing!
It is MANDATORY to take appropriate measures to reduce the risk and for personal protection.



Note

'Note' indicates important information relating to the product or highlights parts of the documentation for special attention.

Qualified personnel

'Qualified personnel' are experts who are familiar with the installation, mounting, commissioning and operation of these types of products.



Electrical voltage!
Danger to life due to electric shock!
Keep a safe distance and avoid contact with the electrical system. It is MANDATORY to take suitable measures to reduce the risk and for personal protection.



Hot surface!
Risk of burns from touching the surface!
Do not touch the surfaces which are marked with this warning sign. Allow the surfaces to cool down after operation. Use personal protective equipment (PPE).



Use protective gloves!
Risk of injury from corrosive, hot or sharp objects!
Use adequate hand protection when working with chemicals, sharp objects or extreme temperatures.



Wear safety goggles!
Risk of injury to the eyes from splashes or flying particles!
Use suitable safety goggles.



Wear protective clothing!
Risk of injury from corrosive, hot or sharp objects!
Wear adequate protective clothing when working with chemicals, sharp objects or extreme temperatures.



Use safety shoes!
Risk of injury from falling objects, slippery floors or sharp objects on the floor!
Wear safety shoes with a suitable safety class.



Use head protection and full safety goggles!
Risk of injury from falling objects and splashes or flying particles from all directions.
Wear a helmet and full safety goggles when working with heavy equipment and where there is a risk to the eyes from splashes or flying particles from all directions.

6 Introduction

Major problems of the extractive continuous gas analysis are the materials contained in the sample gas e.g. dust, water vapour and also gas components forming corrosive acids with condensing water vapour.

In order to realize an easy-to-maintain measurement the dust has to be separated without condensation of water vapour. This prevents “baking” of dust and water and the possible acid formation. This way a blockage of filters and connected line is prevented and the probe material in contact with the gas will not be affected.

The solution are heated **M&C** sample probes like e.g. probes of the series **SP2000..** This probes guarantee a minimum of maintenance work if correctly adapted to the process conditions. At the continuous gas sampling for analytical measurements with **M&C** gas sample probes a fine dust filtration already happens at the sample point. Hereby already a majority of necessary maintenance work at analyzer systems is prevented.

Basically, the quantity of sampled gas should be kept to a necessary minimum to guarantee a minimum of maintenance work and a maximum of availability. This is made possible thanks to optimised downstream gas conditioning using **M&C** components.

7 Serial Number

The nameplates bearing the serial number are located on the side of the electrical connection box.



Note

Always quote the device's serial number when making enquiries and ordering replacement parts.

8 Technical Data

Gas sample probe type	SP2000	SP2000-H	SP2300-H	SP2400-H
Part No.	20S1000	20S2000	20S3000	20S3500
Weather protection shield	No	Yes	Yes	Yes
Protection class terminal box	IP54 EN 60529			
Material filter housing	Stainless steel SS 316/316Ti*		PTFE	Titanium
Sealing material	FKM (standard) /7aT* = PTFE -H320/C* = Graphite			
Probe flange sealing material	Novapress®			
Insitu probe tube/pre-filter	Optional			
Sample pressure max.	0.4 - 6 bar abs. (standard), /7aT*= 2 bar abs., /HP* = 25 bar abs.		2 bar abs.	0.4 - 6 bar abs.
Ambient temperature	20 to +180 °C [68 to 356 °F]	-20 to +60 °C (standard) [-4 to 140 °F]; /PT100, /Fe-CuNi, /Ni-CrNi* = -20 to +80 °C [-4 to 176 °F]		
Filter chamber volume	120 cm ³			
Filter porosity	S-2K150= ceramic (standard), 2 µm, /F-0, 1GF150= glass fiber*, 0.1 µm, /F-3SS150= stainless steel*, 3 µm, /FW= spun glass*			
Thermostat, temperature adjustment		0 to 180 °C (standard) [32 to 356 °F] -H320/C*= 0 – 320 °C [0 to 608 °F] /Pt100* /Fe-CuNi* /Ni-CrNi*		
Ready for operation		After 40 min -H320/C* = after 60 min		
Low temperature alarm contact (standard)		Contact rating: 250 V, 3 A~, 0.25 A= alarm point: ΔT 30 °C		
Sample gas outlet connection	1x 1/4" NPT i (standard) tube connection* ø 6, 8 or 10 mm -H320/C*= tube connection 6 or 8 mm*			
Backflush/Test gas connection	1/4" NPT I (standard) /R*, -H320/C*= tube ø 6 mm			
Power supply		230 V 50/60 Hz, 800 W /115 V* = 115 V 60 Hz, 800 W (fuse protection 10 A)		
Electrical connections		Terminals max. 4 mm ² , 2 x cable gland M 20 x 1.5		
Electrical equipment standard		EN 61010, EN 60519-1		
Mounting flange	DN 65 PN 6, form B >DN or ANSI possible* /HP* = DN 50 PN 25			
Mounting flange material	SS 316Ti		PTFE	Titanium
Weight	7 kg (standard) [15.4 lbs]	15.4 kg (standard) [34 lbs]	15.4 kg (standard) [34 lbs]	14.5 kg (standard) [32 lbs]

* = Optional

Differential pressure and T90-time at different flow rates							
ΔP and T90 at flow of	100	200	500	1000	1500	3000 (only/HF)	NI/h
ΔP with new filter element S-2K 150/F-0,1GF150	0.007	0.011	0.020	0.058	0.135	0.240/0.225	bar
ΔP with new filter element F-3SS150	0.006	0.012	0.040	0.110	0.215	0.405	bar
T90-time without sample tube/pre-filter	6.0	3.5	1.0	< 0.5	< 0.5	< 0.5	s

9 Application

The **M&C** gas sample probes type **SP2000...**, **SP2300-H** and **SP2400-H** are used for continuous extraction of gases from dust laden, high-temperature and/or humid processes.

10 Description

The sample probes are designed for easy installation, reliable and flexible operation and trouble-free maintenance. Depending on the problem, different sample tubes or pre-filters (see data sheets) are screwed into the thread (G 3/4" i) in the mounting flange. This equipment is not included in the scope of delivery of the probe.

The large-surface ceramic deep filter element (fibre glass or glass wadding fillings are also available) is placed in a housing with small dead volume outside the process area. The probes are designed so that no tools are necessary for changing the filter element, the sample line needs not to be dismantled and no contamination on the clean gas side will occur. Cleaning or back purging of the sample tube is possible from outside.

Due to the special execution of the heating element of the **SP2000-H**, **SP2300-H** and **SP2400-H** (with protection cover), the complete filter housing including mounting flange is heated, adjustable up to 180 °C [356 °F] (version **H320/C** up to 320 °C [608 °F]), so that a safe operation without shortfall below the dew point in the out-of-process area is guaranteed. The temperature adjustment of the standard version is made via an integrated capillary sensor thermostat with excess temperature limiter and alarm function in compact configuration. Calibration gas feeding and comparison sampling at the probe are possible.

Depending on the gas composition, it may be possible that the standard material of the probe body (stainless steel 1.4404) is not sufficient with respect to its corrosion resistance. For this case, the **SP2300-H** of PTFE is available or alternatively for a heating above 180 °C [356 °F] the **SP2400-H** out of titanium.

The following filter elements are available:

Type of the filter element	Porosity	Material
S-2K 150	2 µm	Ceramic (standard)
S-3G 150	3 µm	Glass
S-3SS 150	3 µm	Stainless steel SS 316
S-0,1GF 150	0.1 µm	Glass fiber
FW	-----	Spun glass

The following sealing agents are applied:

Material	Type	Max. temperature
Viton®	Standard	Max. 180 °C [356 °F]
PTFE	Type /7aT	Max. 180 °C [356 °F]
Graphite	Type -H320/C	Max. 320 °C [608 °F]

The following types of partial filter heating and regulation are possible:

Type	Version
-H	Electrical heating and control with incorporated capillary thermostat (standard)
/PT100 /Fe-CuNi /Ni-CrNi	Electical heating and control with external electronic temperature controller
/D	Steam heating, not controlled

11 Probe Design of the Heated Version

A complete gas sample probe consists of the heated filter part and a sample tube or pre-filter. The filter housing with its all-round heating element ① forms a unit with the standard mounting flange DN 65 PN 6 ② and the laterally mounted electrical connection box ③.

The heat-insulated shield is mounted on the stainless steel angle ④ sheet which is mounted on the mounting flange. It is secured with 2 pressure clamps. The cover ensures a uniform distribution of heat over the probe heater and at the same time serves as protection against weather and accidental contact.

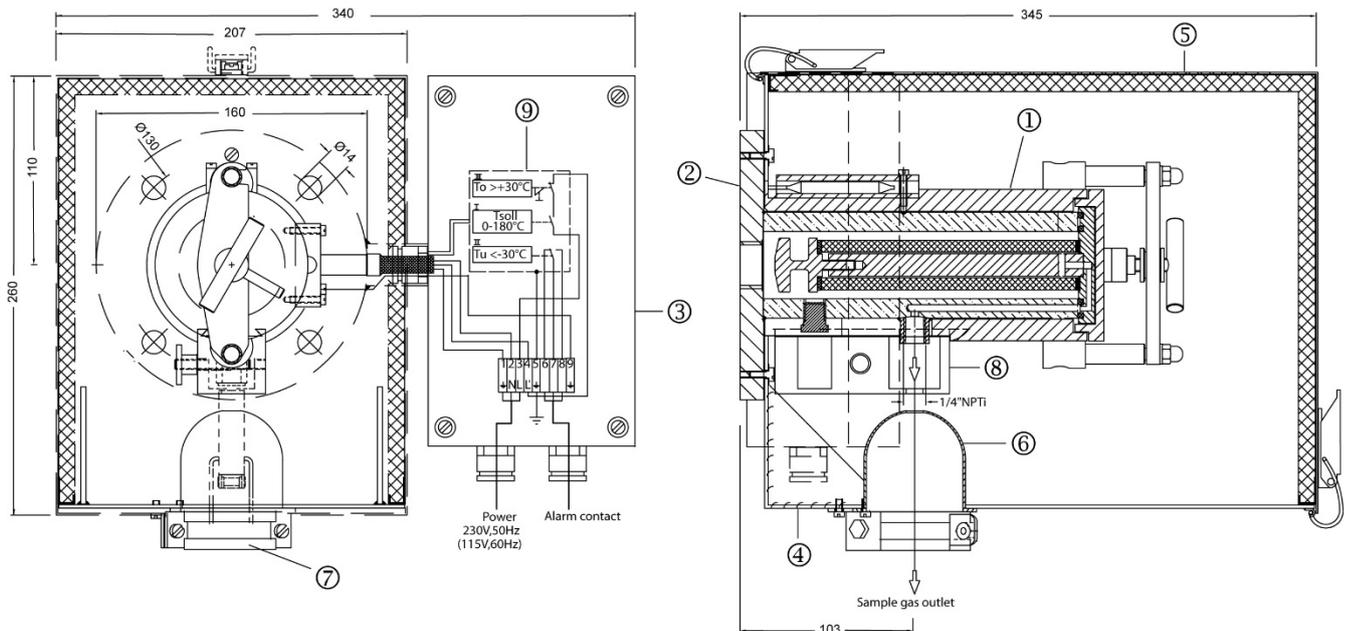


Figure 1 Design of basic version SP2000-H

11.1 Sample Gas Connection

The connecting clamp ⑦ for attaching heated **M&C** sample lines with external dimensions of between 40 and max. 50 mm is located at the aperture on the underside of the angle sheet, which is closed with a silicon lid ⑧. The clamp is mounted on an adjustable mounting bracket which allows adjustment for various sample line diameters.

The standard probe's sample gas outlet connection has a 1/4" NPT internal thread to which the customer must connect a suitable size of temperature resistant and threaded connector to connect the sample line in a gas tight manner. These connectors can be supplied by **M&C**.

In the high-temperature version **-H320/C...**, the sample gas outlet connection is fitted with a welded 6 mm threaded pipe connection (optional 8 mm).

After the threaded pipe connector and sample line have been mounted, the sample gas outlet connection is enclosed in special heat-conducting jaws ⑧ in order to avoid temperature failures in the critical connection areas. The size of the heat-conducting jaws allows connection joints up to an external pipe dimension of 10 mm.

11.2 Temperature Controller

In standard version **-H**, or with option **-H320/C** temperature control is ensured by way of the capillary tube thermostat which is built into the connection box and which has a regulation range between 0 to 180 °C [32 to 356 °F] (**-H**) or 0 to 320 °C [32 to 608 °F] (**-H320/C**). Rated values can be set to a maximum 180 °C [356 °F] resp. 320 °C [608 °F]. The temperature has an excess temperature limiter which permanently switches off the heating if the set temperature is exceeded by 30 °C. The heating can be switched back on again by pressing the green RESET-button which is located below the aperture in the thermostats mounting.

The thermostat has a temperature failure alarm which activates a contact if the temperature falls 30 °C below the set temperature. This status alarm is located on the terminal strip as a potential-free switch over contact.

If temperature control is to be achieved using external electronic equipment, a Pt100 (a max. of two can be built in) or an Fe-CuNi resp. Ni-CrNi thermoelement is provided as a temperature sensor.

M&C also supplies suitable temperature controller, e.g. Type **70304G** (see data sheet for temperature controller) which also can be mounted directly at the gas sample probe (max. ambient temperature +45 °C [113 °F]).

11.3 Sample tube and Pre-filter Possibilities

Depending on the process gas temperature and composition, probe tubes made of different materials are used with G 3/4" connections.

Sample tube Type	Part No.	Temperature max. [°C]	Material tube/connection part	Standard length [mm]	Length max. [mm]	Tube ø o/i "d1" [mm]
SP2000/PV	20S9070	90	PVDF/ PTFE-GV	1000	1500	25/21
SP32**	20S9280	90	PVDF/ PTFE-GV	800	800	50/44
SP2000/T	20S9083	160	PTFE/ PTFE-GV	500	500	25/15
SP2000/Ti	20S9075	400	Titanium	1000	2500	25/22
SP210/SS	02S9200	600	SS 316Ti	1000	2000	12/10
SP2000/SS	20S9065	600	SS 316Ti	1000	2500	25/22
SP2000/SS-Vm	20S9067	600	SS 316Ti	1000	2500	25/06
SP2000/HC	20S9090	900	Hastelloy®	1000	2500	25/22
SP2000/KA	20S9080	1300	Kanthal®/SS 316Ti	1000	1500	27/20
SP2000/IN	20S9077	1100	Inconel®	1000	2000	25/22
SP2000/CR-2*	20S9098	1400	Cr AL ₂ O ₃ /Hastelloy®	900	900	22.5/13
SP2000/CR-20*	20S9099	1400	Cr AL ₂ O ₃ /Hastelloy®	1200	1200	22.5/13
SP2000/AO without connector/ adapter	20S9385	1800	Aluminiumoxide ¹⁾ /-	1000	1500	24/18
Adapter for SP2000/AO	20S9395	(600)	-/SS 316Ti			

Sample tube Type	Part No.	Temperature max. [°C]	Material tube/connection part	Standard length [mm]	Length max. [mm]	Tube ø o/i "d1" [mm]
Adapter for SP2000/AO	20S9397	(900)	-/Hastelloy®			

* Sample tube with support adapter. Max. Temperature concern the area of the support adapter on approx. 200 mm length depend on material 600/900 °C [1112/1652 °F].

** For gas sampling downstream wet scrubbers for droplet separation

¹⁾ standard

²⁾ Please pay attention to the characteristic feature of ceramic in case of high and changing temperatures!

Other materials or versions on request.

For more information about sample tubes see data sheet

To prevent condensation between sample point and heated gas sample probe or in case of condensation in the area of the connection piece heated sample tubes made of stainless steel with flange connection DN 65 PN 6 are used.

Type	Max. process temperature [°C]	Length max. [m]	Tube ø OD [mm]	Temperature sensor
SP-30H1.1, heating max. 320 °C	Max. 550 [1022 °F]	2.0 (standard)	ø 42.2	Fe-CuNi
SP-30H1.1V, heating max. 320 °C	Max. 550 [1022 °F]	2.0 (standard)	ø 42.2	Fe-CuNi
SP30-H2, heating max. 320 °C	Max. 550 [1022 °F]	2.0 (standard)	Ø 42.2	Pt100
SP35-H1.1, heating max. 320 °C	Max. 550 [1022 °F]	0.175	ø 42.2	Fe-CuNi
SP35-H2, heating max. 320 °C	Max. 550 [1022 °F]	0.175	ø 42.2	Pt100

For more information about heated sample tubes see data sheet

In case of heavier dust loading of the process gas, we recommend using a pre-filter under all circumstances in order to prolong service life. This can be supplied with or without dead volume displacer depending on the response times required. These filters can be screwed directly into the probe flange or via extension tubes fitted with volume displacers.

The following pre-filters can be selected :

Pre-filter Type	Part No.	Temp. max. [°C]	Material filter/connection	Filter porosity [µm]	Dust content g/m ³	Inside volume displacer	Length [mm]	Filter ø [mm]	Connection
SP2000/20SS 150	20S9160	600	SS 316/316Ti	20	2-10		150	31	ø 25
SP2000/V20	20S9085	600	SS 316/316Ti	2	2-10		220	51	G 3/4" a
SP2000/V20-0	20S9105	600	SS 316/316Ti	2	2-10	X	220	51	G 3/4" a
SP2000/V20/HC	20S9095	900	Hastelloy®	2	2-10		220	51	G 3/4" a
SP2000/V20-0/HC	20S9115	900	Hastelloy®	2	2-10	X	220	51	G 3/4" a
SP2000/V20-T	20S9315	200	PTFE/ SS 316Ti	3	> 10		400	65	G 3/4" a
SP2000/V20-2	20S9125	600	SS 316/316Ti	2	> 10		520	60	G 3/4" a
SP2000/V20-1	20S9145	600	SS 316/316Ti	2	> 10	X	520	60	G 3/4" a
SP2000/V20-2/HC	20S9135	900	Hastelloy®	2	> 10		520	60	G 3/4" a
SP2000/V20-1/HC	20S9155	900	Hastelloy®	2	> 10	X	520	60	G 3/4" a

SP2000/V20-4 ¹⁾	20S9290	600	SS 316/316Ti	2	2-10		¹⁾ 300	31	G 3/4" a
SP2000/V20-3 ¹⁾	20S9300	600	SS 316/316Ti	2	2-10	X	¹⁾ 300	31	G 3/4" a
SP2000/V20-5	20S9127	500	SS 316/316Ti	3	2-10		220	50	G 3/4" a
SP2000/V20-6	20S9128	500	SS 316/316Ti	3	> 10		520	60	G 3/4" a
SP2000/V12-1	20S9500	1000	Keramik ⁵⁾ / SS 316Ti	1	> 10		500	40	DN 65 PN 6
SP2000/V12-3	20S9510	1000	Keramik ⁵⁾ / SS 316Ti	1	> 10	optional	1000	60	DN 65 PN 6
SP2000/V12-2	20S9505	1000	Keramik ⁵⁾ / SS 316Ti	2	> 10	optional	1000	60	DN 65 PN 6
SP2000/V12-1/SS ²⁾	20S9525	600	Keramik ⁵⁾ / SS 316Ti	1	> 10		500	40	DN 65 PN 6
SP2000/V12-3/SS ³⁾	20S9535	600	Keramik ⁵⁾ / SS 316Ti	1	> 10	optional	1000	60	DN 100 PN 6
SP2000/V12-2/SS ³⁾	20S9530	600	Keramik ⁵⁾ / SS 316Ti	2	> 10	optional	1000	60	DN 100 PN 6
SP2000/V12-1/IC ²⁾	20S9540	1000	Keramik ⁵⁾ / Incoloy [®] -SS 316Ti	1	> 10		500	40	DN 65 PN 6
SP2000/V12-3/IC ³⁾	20S9550	1000	Keramik ⁵⁾ / Incoloy [®] -SS 316Ti	1	> 10	optional	1000	60	DN 100 PN 6
SP2000/V12-2/IC ³⁾	20S9545	1000	Keramik ⁵⁾ / Incoloy [®] -SS 316Ti	2	> 10	optional	1000	60	DN 100 PN 6

¹⁾ Pre-filter V20-3, V20-4 optional up to 1000 mm length available.

²⁾ With protection tube V12-1.

³⁾ With protection tube V12-2/3.

⁴⁾ Pre-filter with special construction for efficient back-purge.

⁵⁾ Please pay attention to the characteristic feature of ceramic in case of high and changing temperatures!

For more information about pre-filters see data sheet

12 Receipt of Goods and Storage

- The gas sample probe and any special accessories should be removed carefully from the packaging and checked immediately for completeness against the delivery note.
- Check the goods for any damage incurred during transport and if necessary inform your transport insurer of any damage.

The gas sample probe is normally delivered in two packaging units:

1. The gas sample probe with the screws, nuts and flange seal required for mounting.
2. Sample tube or pre-filter, if applicable with extension tube.



Note

The equipment should be stored in a protected, frost-free room!

13 Preparation for Installation

- Select the optimal sampling point in accordance with the generally applicable guidelines or consult the competent persons.
- Locate the sampling point in such a way that there is adequate space for inserting and removing the probe and pay attention to the insertion length of the probe tube.
- Make certain that the probe is easily accessible so that you can carry out any subsequent maintenance work without trouble.
- Locate the probe connections in such a way that the connections' temperature is always above the acid dew point in order to avoid corrosion and blockage problems. If this is not possible, a heated **SP35/SP30** probe tube is recommended for cold connections.
- If the ambient temperature in the area of the connections is $> 80\text{ }^{\circ}\text{C}$ [$176\text{ }^{\circ}\text{F}$] as a result of radiated heat, then a radiated-heat deflector must be mounted to protect the probe.
- The connection's mounting flange connection should comply with DN 65 PN 6. If other connection sizes are required, a special adapter flange **/SO10** can be supplied as an option. Instead of flange connection mounting, the probe can also be mounted using a **/SO1** R2" adapter on a corresponding threaded sleeve connection. This adapter can be supplied. The necessary minimum flange size and the minimum connection diameter depends on the diameter of the probe tube or pre-filter used.

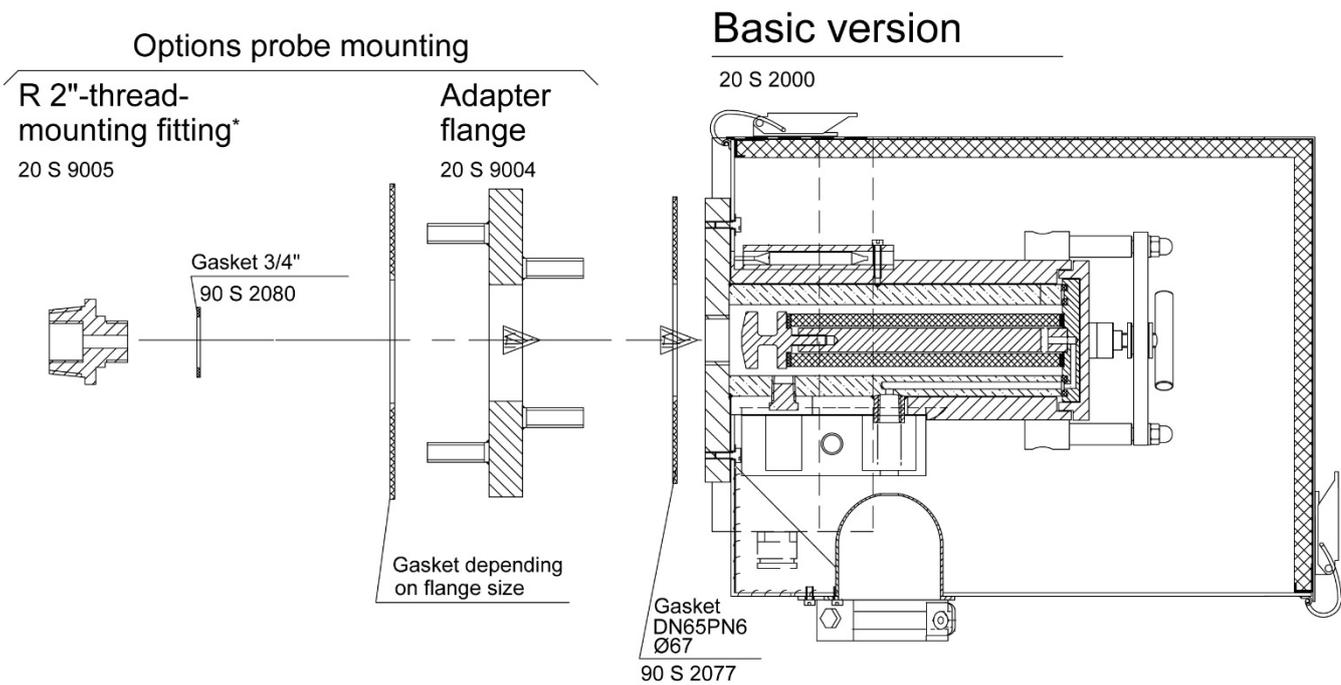


Figure 2 Mounting possibilities SP2000..., SP2300-H, SP2400-H

Before mounting, the probe must be adjusted to the existing operating conditions.

The existing operational parameters are to be checked accordingly prior to commencing mounting work.

Low-excess pressure situation	mbar	bar	
Process temperature	°C, Min.	°C Max.	
Dust loading	g/m ³		
Dust composition – grain size	µm		
Gas composition	corrosive	toxic	explosive
Parameters to be measured, e.g. O₂, CO, SO₂, NO_x...	vol%	mg/Nm ³	ppm
Necessary gas flow	l/h, Min.	l/h, Max.	
Necessary T₉₀-time	s		

14 Mounting

M&C SP2000 probes are designed for stationary use and if properly selected and mounted a long service life and minimum maintenance are guaranteed.

A horizontal operating position with approx. 10° inclination to the process is recommended.

14.1 Checking the Filter Element

Before starting the filter element has to be checked for tight fit.

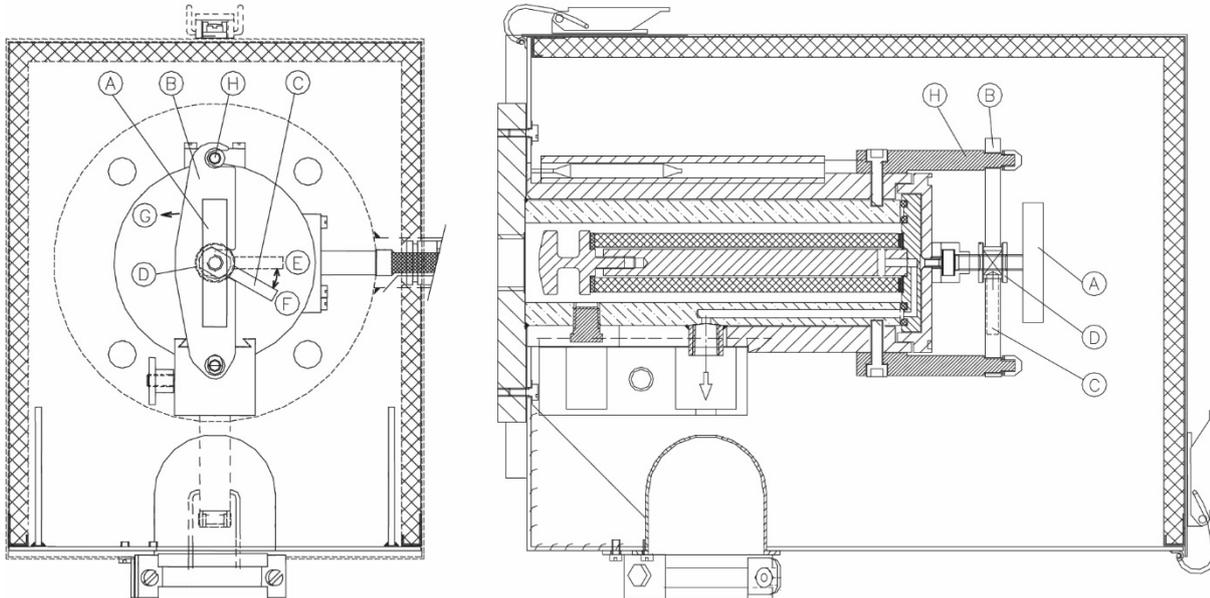


Figure 3 Cross-sectional drawing SP2000-H

Removing the filter housing lid to check or change the filter element has to be done as follows :

1. Remove the probe's protection shield after opening the two clamping devices;
2. Turn toggle screw "A" approx. 1 turn counter-clockwise, that the filter housing lid will lift up;
3. Turn handle "C" in position "E";
4. Turn clamp "B" counter-clockwise in direction "G";
5. Take toggle screw "A" and pull out the filter housing lid;
6. Check tight fit of filter element and tighten it if necessary (hand tight) or change filter element and corresponding sealings;



Warning

When working during operation: High surface temperatures!



Touching the device can cause severe burns!



Wear protective gloves! Secure the device against unauthorized access.

7. Push in the filter housing lid into the filter area;
8. Turn clamp "B" clockwise and turn with the handle "C" the ringscrew "D" in position "E", that the clamp "B" will latch into the ringscrew "D" and the threaded bolt "H". It could be necessary to move the filter housing lid a little bit forward and backward;
9. Turn handle "C" in position "F" and fasten the filter housing lid by turning the toggle screw "A" clockwise by hand.

The following pictures should explain the above mentioned steps.



Figure 4 Removing the new filter housing lid

14.2 Mounting of the Screwed Connector at the Sample Outlet

1. Remove heat conducting jaws ① at the sample outlet after loosening the knurled nut ②.

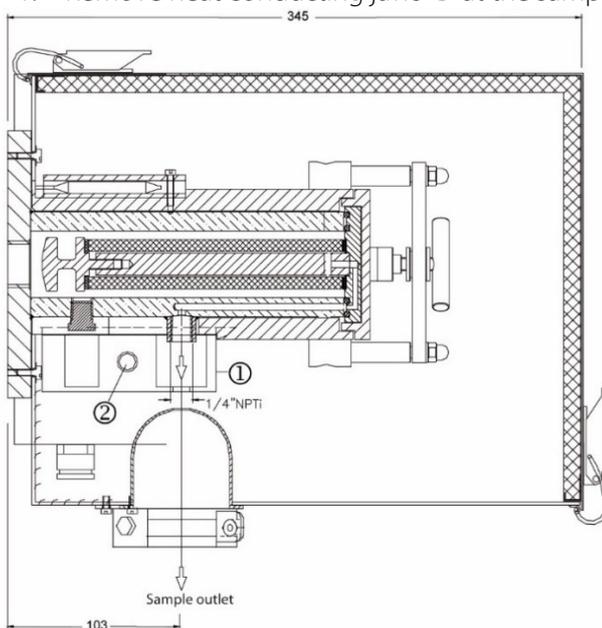


Figure 5 Mounting of screwed connector at sample outlet

2. In order to connect the sample line, screw in a suitably sized threaded connector with a ¼"-NPT connecting thread using PTFE sealing tape.
3. For option second sample outlet **SP2000/2x** screw in two suitably sized threaded connectors with a ¼"-NPT a.
4. For option high heating **-H320/C** a 6 mm pipe socket is welded on and a tube connector for 6 mm tube connection (optional 8 mm) is supplied.
5. Remount heat conducting jaws and tighten knurled nut.

Attention Check tightness of the tube connections!

Caution Never operate probe without heat conducting jaws because of the resulting cold bridge blocking of connector and line is to be expected!

14.3 Mounting of Probe with Sample Tube or Pre-filter

Basically it is advantageous if the probe is built into the process with a lower downward inclination. This mounting position is absolutely necessary if the **SP32** sample tube is used for sampling e.g. after wet scrubbers, so that separated liquid drops can flow back to process.



Note

A preferred mounting position is to have the probe with its sample gas outlet pointing downwards, although this is not absolutely necessary for perfect functioning.

1. Insert flange seal ① (Figure 6) between sampling flange and probe flange.
2. If the heated probe tube type **SP30/35** or the ceramic pre-filter type **V12** is used, then the probe is to be screwed to their flange ② (Figure 6)(with welded threaded bolt). First insert the flange seal between the two flanges.
3. If the probe connection does not correspond to the standard flange connection DN 65 PN 6, then the optionally supplied adapter flange (Figure 2 and Figure 6) should be mounted to the probe in the same way.
4. For high pressure version **/HP** a flange ist standardmäßig ein Flansch DN 50 PN2 5 vorhanden
5. Screw either the probe tube or pre-filter ③ (Figure 6) with thread G3/4"o directly or using an extension tube ④ with the ¾" flat gasket into the ¾" inner thread of the flange of the probe and tighten.
6. Insert sample tube or pre-filter of the complete probe unit into the connection piece and screw probe at the connection piece using the screws, spring rings and nuts supplied.

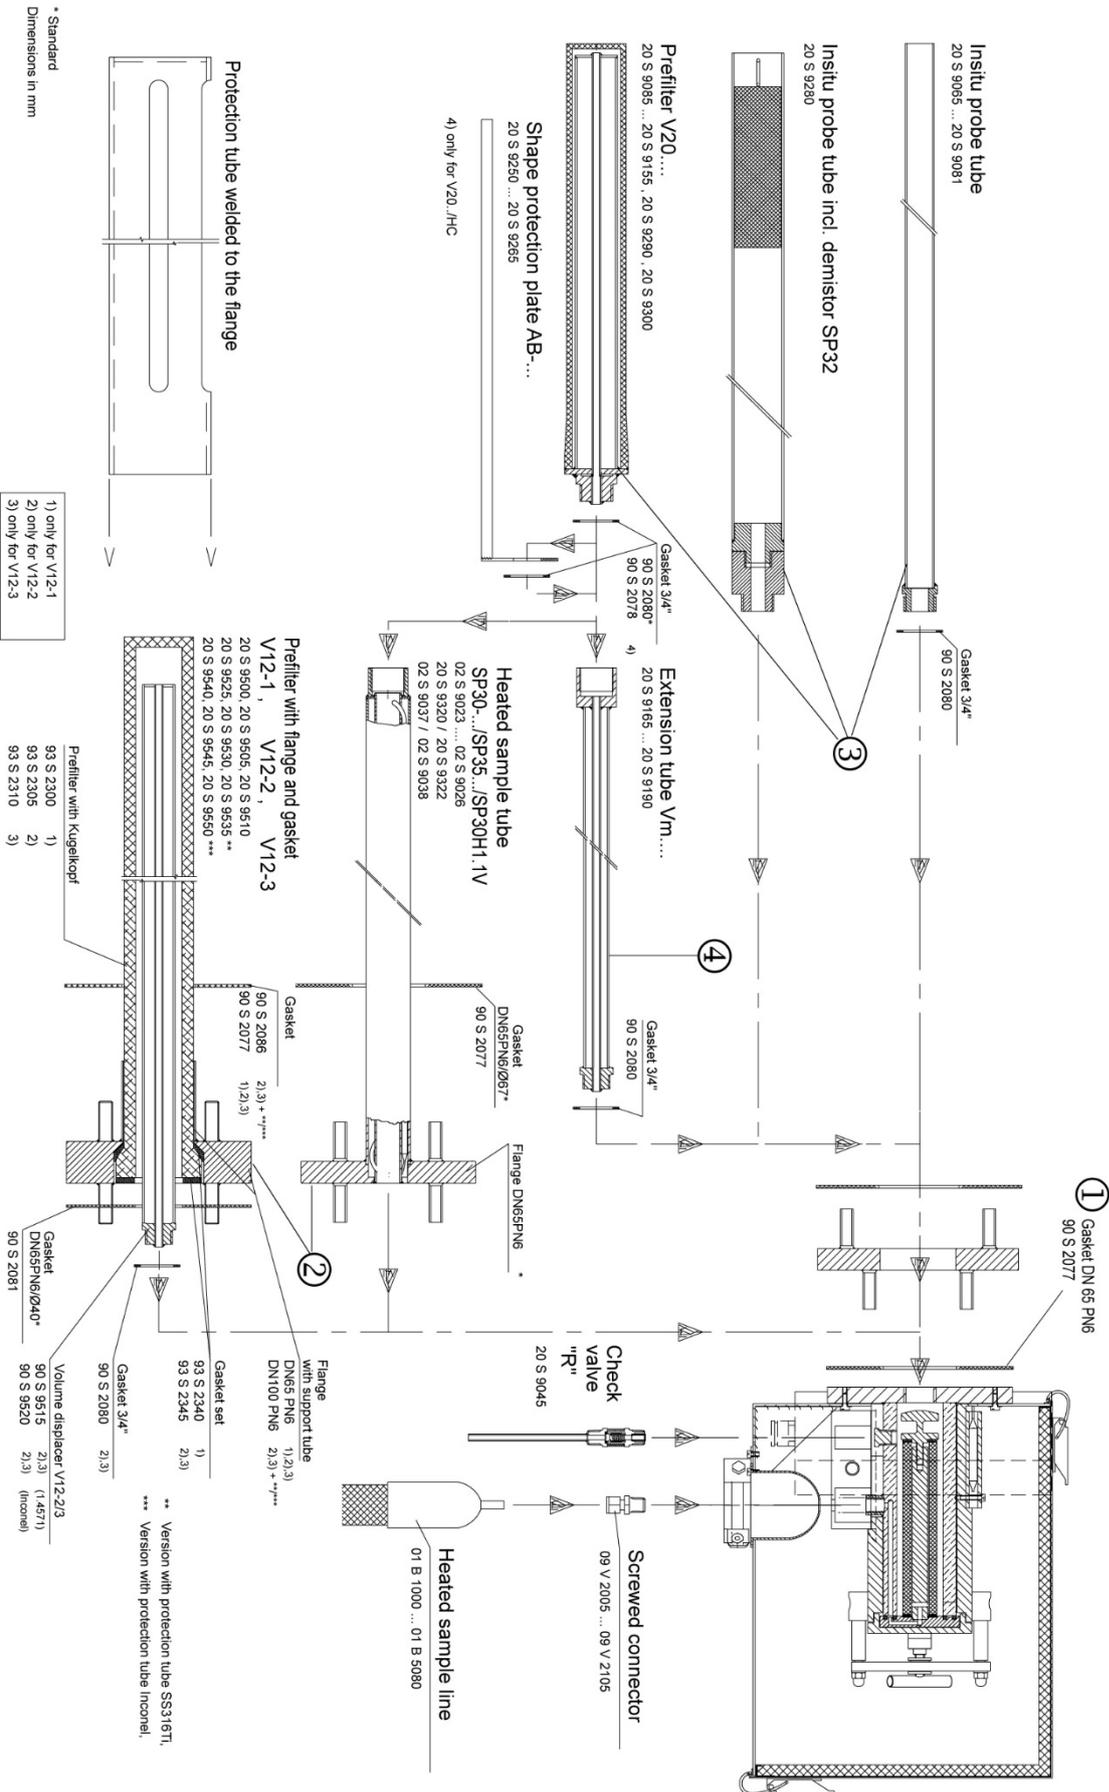


Figure 6 Mounting of sample tube or pre-filter

14.4 Mounting of Heated Sample Line

1. Open sample line mounting bracket ①.
2. Push end of the sample line ② into silicone cap ③ in the bottom of the angle bracket.
3. Depending on type of heated sample line insert stainless steel pipe end with or without PTFE line ④ through hole in the silicone cap ⑤.

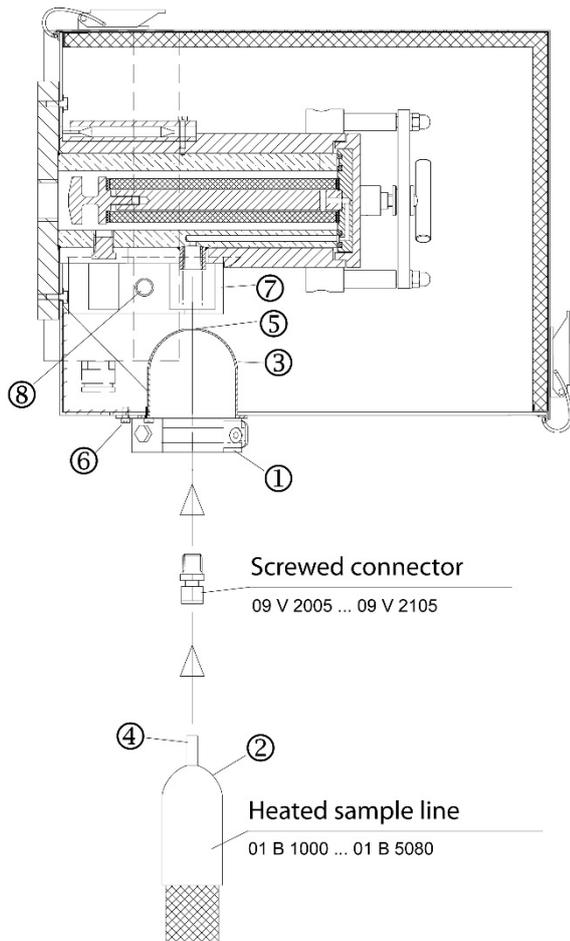


Figure 7 Mounting of heated sample line

1. Connect stainless steel connection piece or interchangeable PTFE tube ④ at the fitting in the sample gas outlet of the probe. For this remove union nut with ferrule and cutting ring and put it in right order and direction on the stainless steel connection piece or the PTFE tube.

Attention

If a PTFE tube is used as sample line, an insert must under all circumstances be inserted in the end of the tube in order to prevent the tube being pressed together.

2. Put connection piece or tube end into the fitting in the sample gas outlet of the probe and tighten the union nut by hand.
3. The temperature-resistant, stainless steel connectors supplied by **M&C** have a double ferrule system to ensure reliable sealing. After tightening the nuts of these connectors by hand, they should then be tightened exactly 1¼ of a turn using a flat spanner and are then properly mounted.
4. Close mounting bracket ①. In case of larger sample line diameters, it may be necessary for the central mounting of the sample line to loosen the two screws and move the small mounting angle ⑥ of the mounting bracket and then re-tighten them.
5. Now place the heat conducting jaws ⑦ around the sample gas connection in the retaining slot and fix with the knurled nut ⑧.

Caution Never operate probe without heat conducting jaws because of the resulting cold bridge blocking of connector and line is to be expected!

14.5 Connection of Option Test Gas Feeding or Blow Back Line

- When using the options /R ① or 3-way ball valve option /3VA or /3VA320 ②, the corresponding tubes for test gas feeding or blow back are connected by means of a tube connection on the respective 6 mm tube socket ③ below the probe housing.

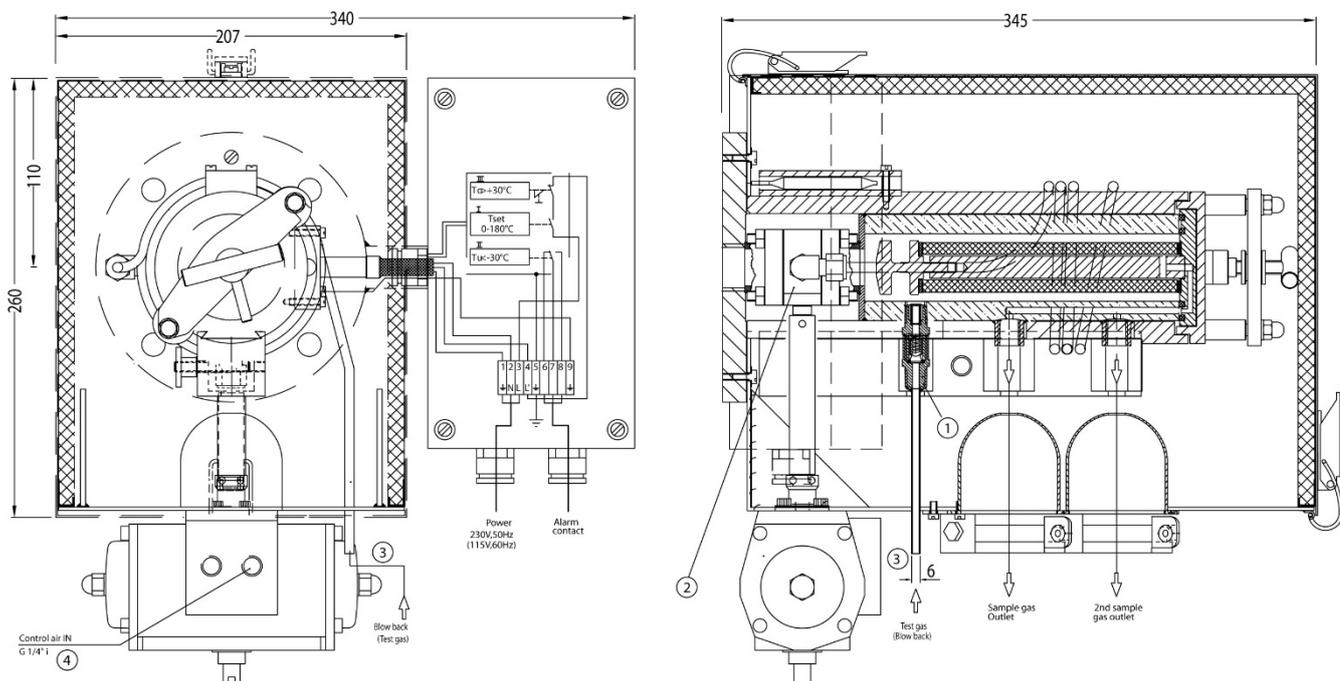


Figure 8 Connection test gas feeding or blow back line

- With option **-H320/C** it is possible to feed test gas via the standard connection for a 6 mm tube that is equipped with a blind cap for the measuring operation. It is placed directly below the heat conducting jaws. For the connection of the calibration gas line, the blind cap must be removed. By means of the union nut that is attached to the consignment, the calibration gas line can be connected.

Attention After the test gas feeding being finished, the connection must be shut again with the blind cap because otherwise this connection would aspirate secondary air and falsify the measuring result!

- Optionally, the test gas feeding or back purging can be effected via a check valve **-H320/R**. The check valve is mounted in the area of the bottom plate. The connecting line (tube/pipe, 6 mm outside diameter) can be connected directly on the check valve.
- After having finished the moutage, put on again the protection cap and fasten it with the quick action locks.

14.6 Connection Option Pneumatic Drive MS1 or MS3

The drive line for actuating the pneumatic drive is connected via a corresponding tube or pipe fitting with G1/4" outside thread ④ (Figure 8 and figures 31 to 34). The required drive pressure is 6.5 up to 9 bar abs.

15 Electrical Connections



Warning

When connecting the equipment, please ensure that the supply voltage is identical with the information provided on the model type plate.



Note

Attention must be paid to the requirements of IEC 364 (DIN VDE 0100) when setting high-power electrical units with nominal voltages of up to 1000 V, together with the associated standards and stipulations.



In any case we recommend the use of temperature resistant cable!

An easily accessible main switch with appropriate labeling must be provided externally.

The main circuit must be equipped with a fuse corresponding to the nominal current (over current protection); for electrical details see technical data.

It is recommended to use the low temperature alarm. In case of an alarm the flow can be stopped and the components downstream the probe are safe for damage.

15.1 Standard Version with Internal Capillary Tube Thermostat

1. Remove the lid of the connection box. The electrical connection layout is also located in the lid (Figure 9).
2. Insert the mains cable (min. $3 \times 1.5 \text{ mm}^2$, clamping range 6 – 12 mm) through the left cable gland M 20 x 1.5 and connect to the appropriate terminals.
3. Insert the signal cable through the right cable gland and connect to the appropriate terminals.
4. Screw lid back on.

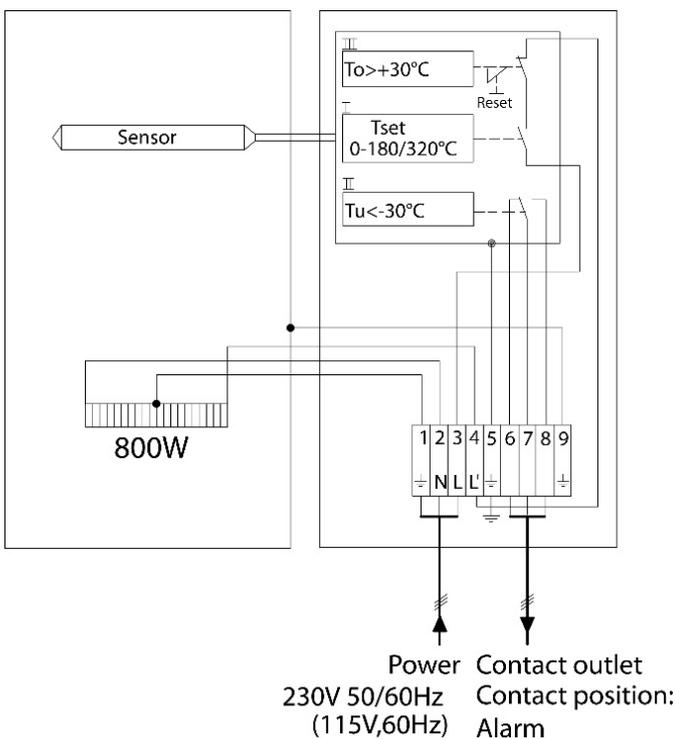


Figure 9 Electrical connection for SP2000-H, SP2300-H and SP2400-H with thermostat controller

15.2 Version with Pt100 or Thermocouple (Option)

In case the gas sample probe is ordered with temperature sensor instead of the thermostat, an electronic temperature regulator is necessary, such as the **M&C** regulator **70304G** (Part No. 01B8451). This instrument can be delivered already mounted on the probe and electrically connected, or it is attached to the consignment as separate unit for external moutage. Then it has to be electrically connected as follows:

1. Remove the lid of the connection box. The electrical connection layout is also located in the lid (Figure 10).
2. Insert the mains cable coming from the external temperature controller (min. $3 \times 1.5 \text{ mm}^2$, clamping range 6 - 12 mm) through the left cable gland M 20 x 1.5 of the connection box and connect to the appropriate terminals.

3. Insert the temperature sensor cable through the right cable gland M 20 x 1.5 and connect to the appropriate terminals.
4. Screw lid back on.

**Note**

In case of versions with thermoelement (e.g. with option -H320/C) a compensation wire is to be provided as sensor line. Corresponding balancing terminals are provided in the connection box.

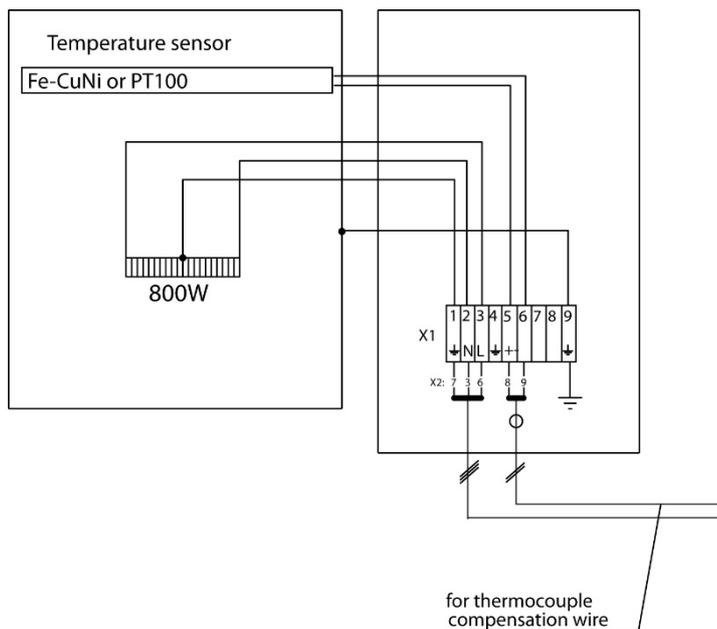


Figure 10 Electrical connection of external temperature controller e.g. 70304G

The electrical connection of the temperature regulator **70304G** is effected according to the connection plan (figure 11) and as described in the following:

1. Unscrew and remove the housing lid.
2. Introduce the mains cable (min. 3 x 1.5 mm², clamping range 6 – 12 mm) through the left cable gland M 20 x 1.5 of the regulator and connect it to the respective terminals.
3. Introduce the cable for the alarm contact (clamping range 6 - 12mm) through the right cable gland M 20 x 1.5 and connect it to the respective terminals.

In case the temperature regulator **70304G** is attached as separate unit, the probe has additionally to be connected with the regulator, according to Figure 10 and the following description:

1. Introduce the power cable for the sample gas probe (min. 3 x 1,5 mm², clamping range 6 – 12 mm) through the second cable gland M20 x 1.5 of the regulator and connect it to the respective terminals.
2. Introduce the temperature sensor cable (clamping range 6 – 12 mm) through the third cable gland M20 x 1.5 of the regulator and connect it to the respective terminals.
3. Screw the lid on the housing again.

Caution

If not all cable glands are used for the electrical connection of the temperature regulator, the remaining ones must be shut in order to guarantee the tightness of the housing.

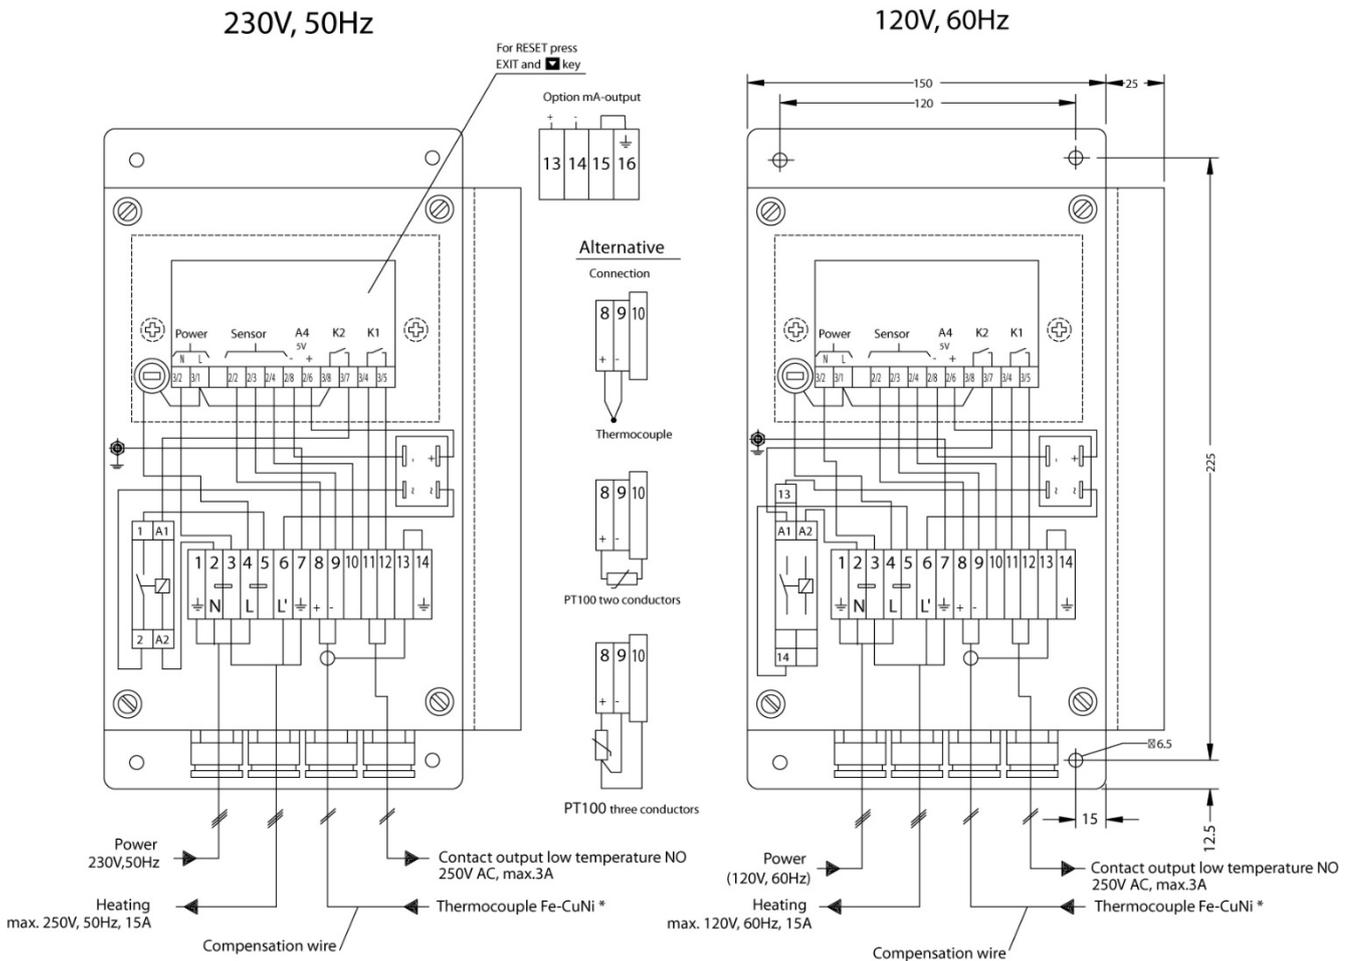


Figure 11 Electrical connection electronic controller 70304G

16 Preparations for Commissioning

Before initial startup, all plant- and process-specific safety measures must be observed. It is mandatory for the operator to complete the enclosed risk assessment of the product.

The gas exposure risk must be assessed by the operator with regard to the hazards posed by process and calibration gas and the setup at the installation site (e.g. tubing, system cabinet/container/plant). If the risk assessment reveals increased exposure hazards, further measures are required.

A visible label must be attached to the installation site in accordance with the risk assessment provided by the operator.

17 Starting-up

Before starting up check whether the mains power supply voltage corresponds with the information stated on the probe's nameplate.

- If there is a built-in ball valve you should also check, if it is closed. In case of hand-operated ball valves, the control grip must be located at the right-hand stop.
- Switch on mains power supply.
- Check the rated value setting on the built-in thermostat or on the external controller.
- The total heating-up time is approximately 2 hours. After about 1 hour the probe is already sufficiently heated for the temperature to have exceeded the temperature failure alarm value (30 °C below rated value), but it still takes about another hour until operating temperature is reached.
- If a ball valve is fitted, operate this via the pneumatic drive or for a 2/2-way ball valve by turning the control grip by hand up to the left-hand stop and for a 3/2-way ball valve into mid position.
- The probe is ready for operation now.



Note

If the rated value temperature needs to be lowered more than 28 °C in one step during operation, the thermostat's excess temperature switch-off is triggered! To switch on again, the reset button must be pressed.



Warning

When working during operation: High surface temperatures!
Touching the device can cause severe burns!



Wear protective gloves! Secure the device against unauthorized access.

17.1 Gas Sample Probe SP2300-H

At the gas sample probe **SP2300-H** exists the electrical heated filter body from carbon filled PTFE.

Due to the difference in linear expansion between PTFE and the aluminum part of the heater, the PTFE inner part expands more than the aluminum part of the heater when it heats up. The difference in length is compensated for by a spring in the cover part.

Caution

We recommend therefore, to loosen the locking screw in the clamp, at the first heating up, to relieve the O-rings in the cover, or better remove the complete filter housing lid.

After reaching the operating temperature (> 2 hours) insert the complete filter housing lid in the probe, and press the clamp by turning the locking screw.

17.2 Option Calibration Gas Feeding and Blow Back

17.2.1 Option Check Valve /R

In order to backflush the probe tube or the pre-filter, flush gas is fed via the backflush valve /R. It is advisable to disconnect the downstream analysis system from the probe before doing this in order to avoid pressure shocks on the system. The check valve's opening pressure is 0.7 bar.



Note

In order to prevent the probe's interior from cooling down, backflushing should as far as possible only be carried out for short intervals < 1 s or use a gas pre-heater type GVW.. (see data sheet for gas pre-heater).



Note


Feed the back-purge gas as quick as possible and with a big nominal width in order to avoid a loss of pressure in the feeding line during the back-purge action.

- The analysis system remains closed while calibration gas is being fed.
- The amount of calibration gas should be at least 25 % greater than the amount of sample gas drawn into the analysis system in order to avoid mixing with the sample gas.
- This type of calibration gas feeding is not to be used in case of processes with over pressure. A built-in ball valve in the probe entrance is recommended here. Basically, a smaller amount of calibration gas is needed in probes with built-in ball valve as the probe is separated from the system on activating the ball valve and thus there is no danger of mixing with the process gas.
- In order to close the probe the control grip has to be turned by hand to the right up to the stop.



Note

In the case of negative pressure operation, it should be noted that false air would be drawn in via the non-closed check valve /R at less than 300 mbar abs.

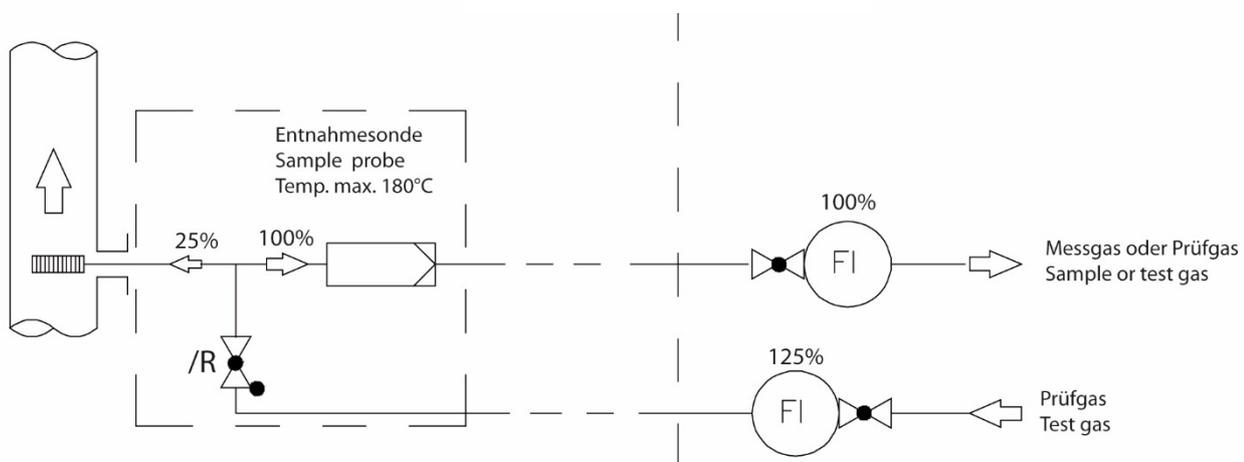

When feeding calibration gas via check valve /R at the probe, mixing with sample gas must be avoided. The calibration gas flow should be at least 25 % higher than the flow of sample gas.

Figure 12 Calibration gas feeding

17.2.2 Option 3/2 Way Ball Valve /3VA and /3VA320

With the 3/2 way ball-valve the two functions “backflush **and** calibration gas feed” can be carried out one after the other. Only one function can be automated via the pneumatic drive.

This method of gas feed has the advantage that during backflushing the downstream analysis system is automatically separated from the probe and during calibration gas feed, the probe is automatically separated from the process and therefore a smaller amount of calibration gas is needed as no mixing with the process gas can occur. During function blow back it is possible to feed test gas via an additional check valve **/R** at the same time (see also Figure 13).

- For sampling operation turn handle to mid position.
- For blow back turn handle from mid to left position up to stop.
- For test gas feeding turn handle from mid to right position up to stop.
- For measuring operation turn handle back to mid position.

17.3 Option Ball Valve Drives

For external control of the probe internal ball valves there is the possibility to use a pneumatic drive with return spring type **MS1, MS3** (for 320 °C [608 °F]) or an electric drive **EA**.

17.3.1 Option Pneumatic Drive MS1 or MS3 when using a 2/2-Way Ball Valve /VA

Ball valve open = measuring operation

Ball valve closed = e.g. changing filter element at process excess pressure or toxic sample gas or test gas feeding with option check valve **/R** without loss of test gas into the process.

Gasentnahmesonde / Sample probe

SP2000-H/R/VA/MS1-NC (NO)

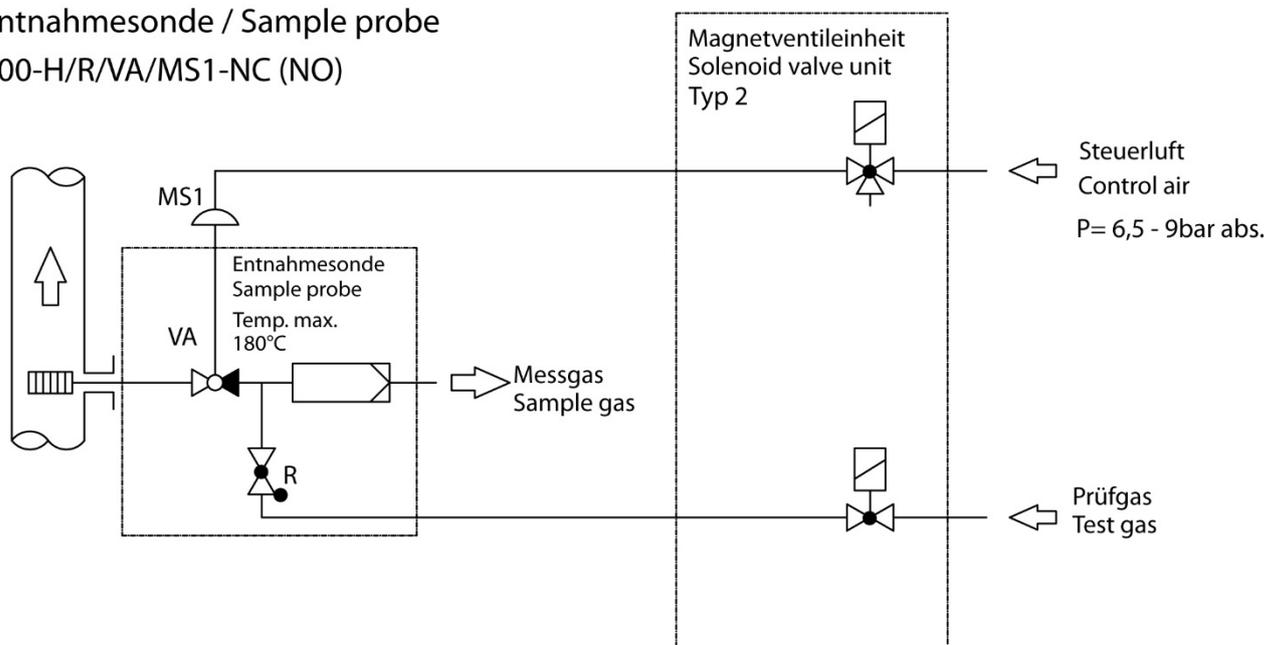


Figure 13 Pneumatic drive for 2/2-way ball valve

When placing the order it shall be specified whether the ball valve should be

NC, without control air closed, or

NO, without control air open and hence switched to measuring.

Standard = **NC**

17.3.2 Option Pneumatic Drive MS1 or MS3 when using a 3/2-Way Ball Valve /3VA

Two functions can be realized with the pneumatic actuator **MS1** or **MS3** in connection with the 3/2-way ball valve /3VA

1. Measuring and blow back **MS-B**
2. Measuring and test gas feeding **MS-C**

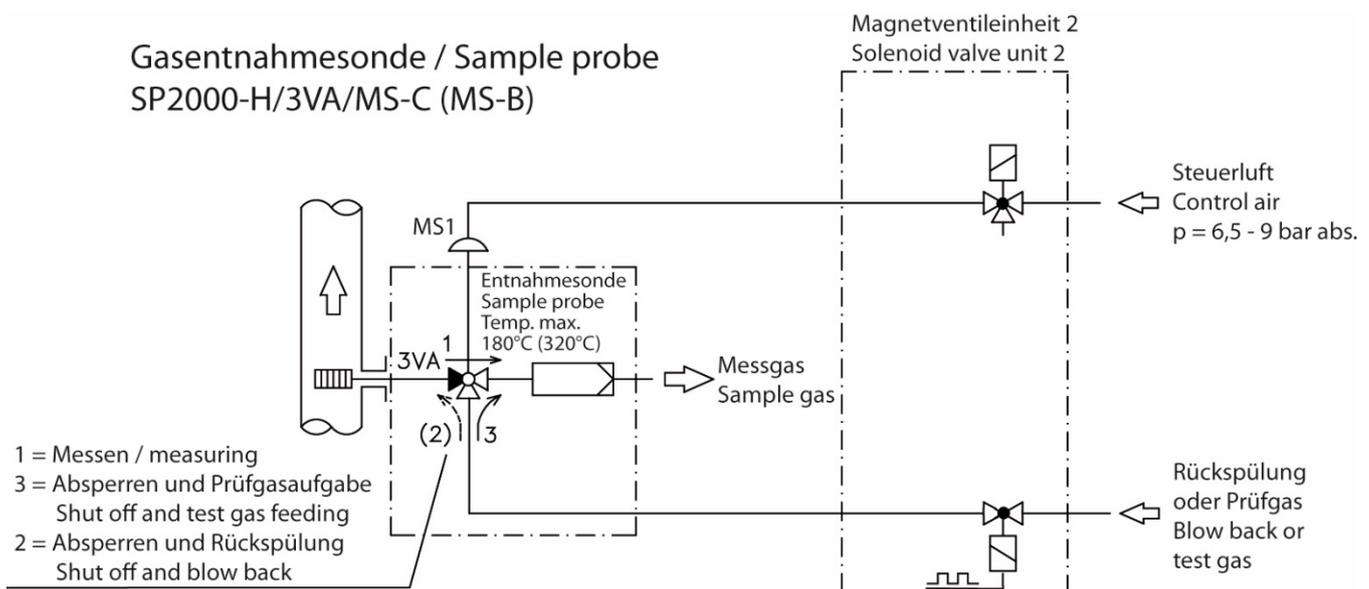


Figure 14 Pneumatic drive for 3/2-way ball valve

When placing the order it shall be specified whether the ball valve should be

NC, without control air closed resp. switched to test gas feeding or blow back, or

NO, without control air open and hence switched to measuring.

Standard = **NC**

17.3.3 Option Electrical Ball Valve Drive

The electrical ball valve drives for control of two operating modes are available in three control voltages 230 V, 115 V or 24 V DC.

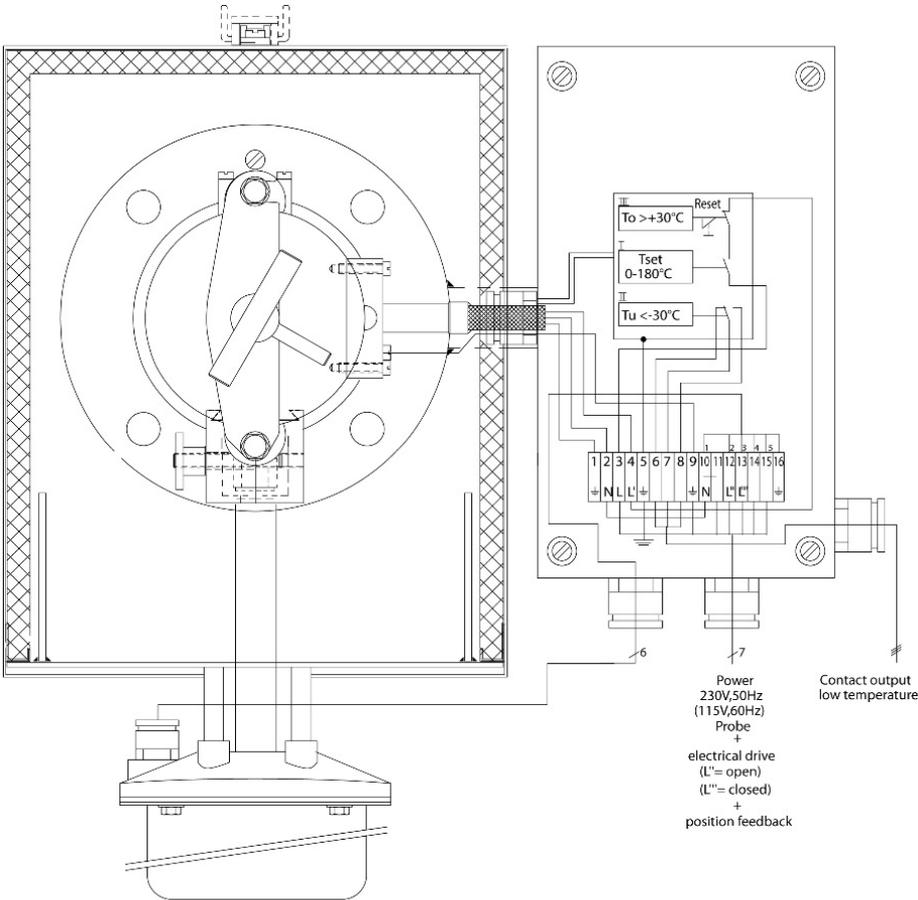


Figure 15 Electrical connection for electrical ball valve drive

17.4 Option Solenoid Valve Units for Blow Back, Test Gas Feeding and Control of the Pneumatic Drives

All solenoid valve units contain a 3/2-way solenoid valve for control of the pneumatic drive. One way of the solenoid valve is used for switching the ball valve the other for ventilation and hence resetting the ball valve. Furthermore depending on demand 2/2-way solenoid valves for blow back and/or test gas feeding are existing.



Note

Feed the back-purge gas with a nominal width as big as possible in order to avoid losses of pressure in the feeding line during the back-purge action.

The following solenoid valve units are for example available:

Solenoid valve unit 2

With 2 solenoid valves for control of 2 operating conditions:

1 x 3/2-way solenoid valve for switching from measurement operation to back purging **or** feeding of test gas.

1 x 2/2-way solenoid valve for feeding of test gas or back-purge gas

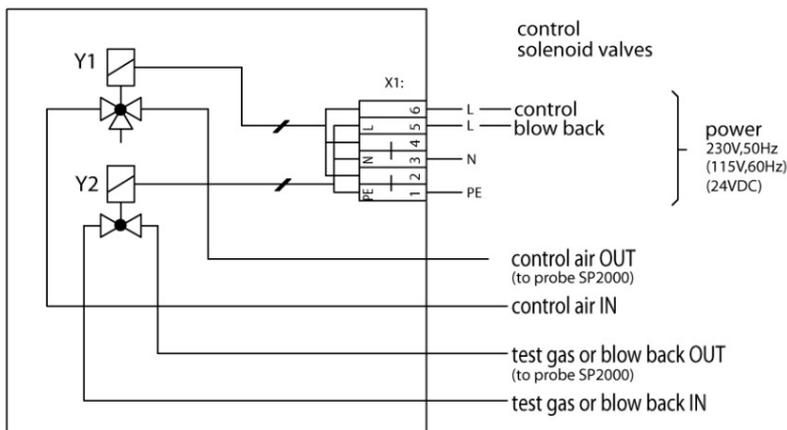
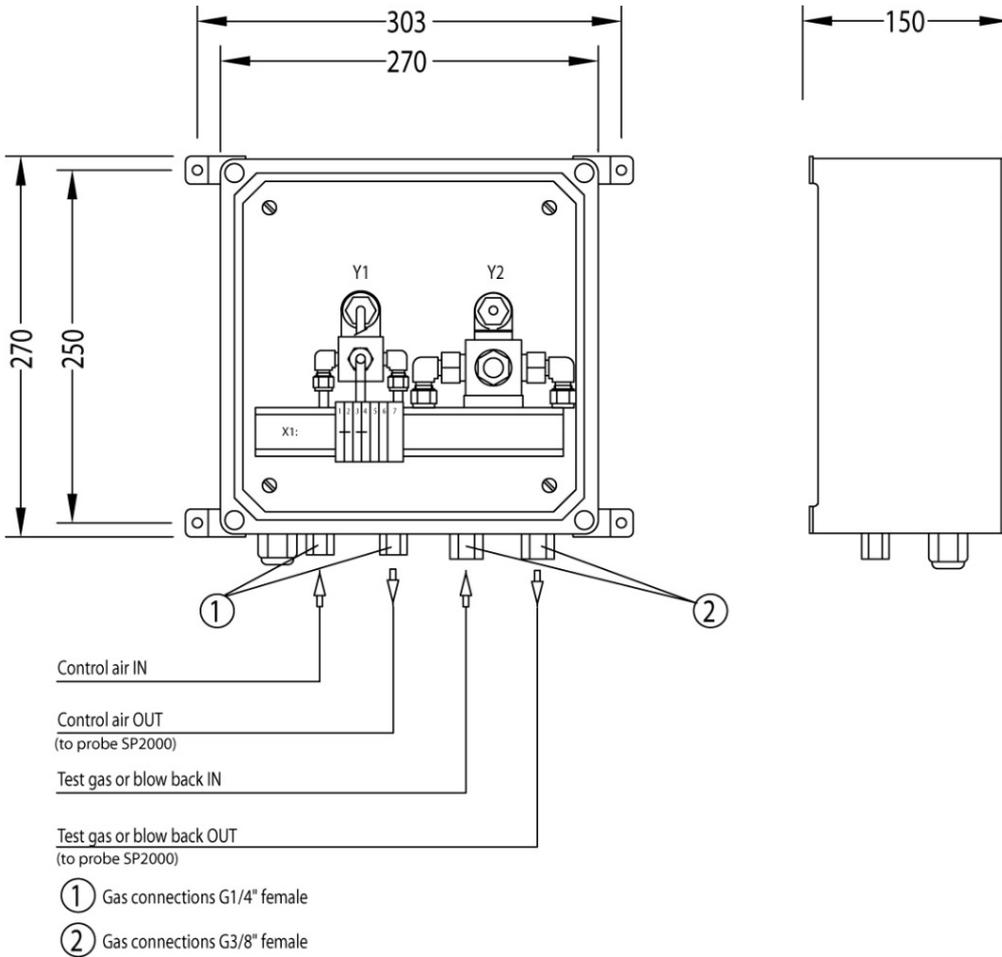


Figure 16 Connections Solenoid Valve Unit 2

Solenoid valve unit 3

With 3 solenoid valves for control of 2 operating conditions:
 1 x 3/2-way solenoid valve for switching over from measuring mode to back purging for eg. option /3VA
 1 x 2/2-way solenoid valve for feeding of test gas via option /R
 1 x 2/2-way solenoid valve for feeding of back-purge gas


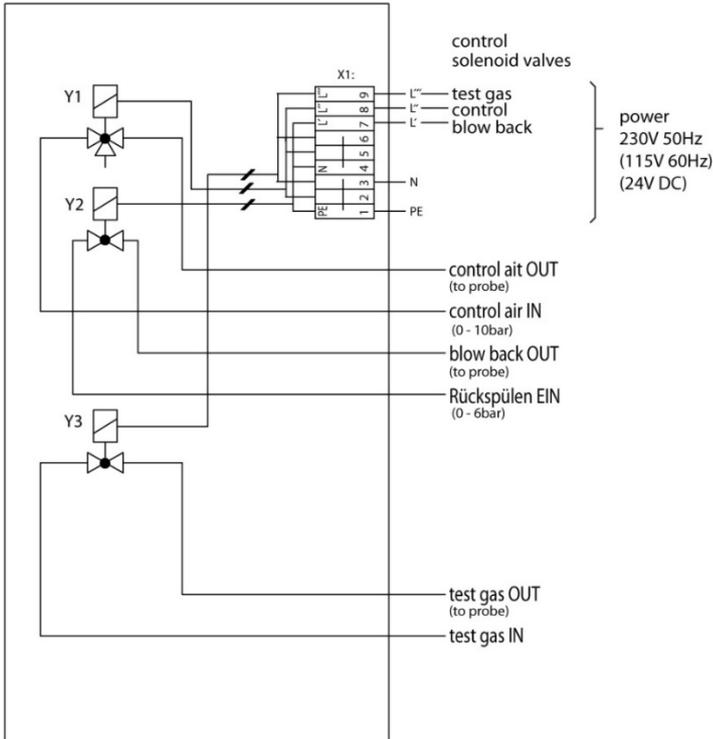


Figure 17 Connections solenoid valve unit 3

17.4.1 Option Drive Unit 234B for the Solenoid Valve Units

The drive unit **234B** is used for control of the solenoid valves in the solenoid valve units for a clocked back purging. The unit is mounted on a cap rail inside the FRP protection housing of the solenoid valve unit and is delivered electrically connected.

17.4.1.1 Function and Adjustment of the Clock Generator K3

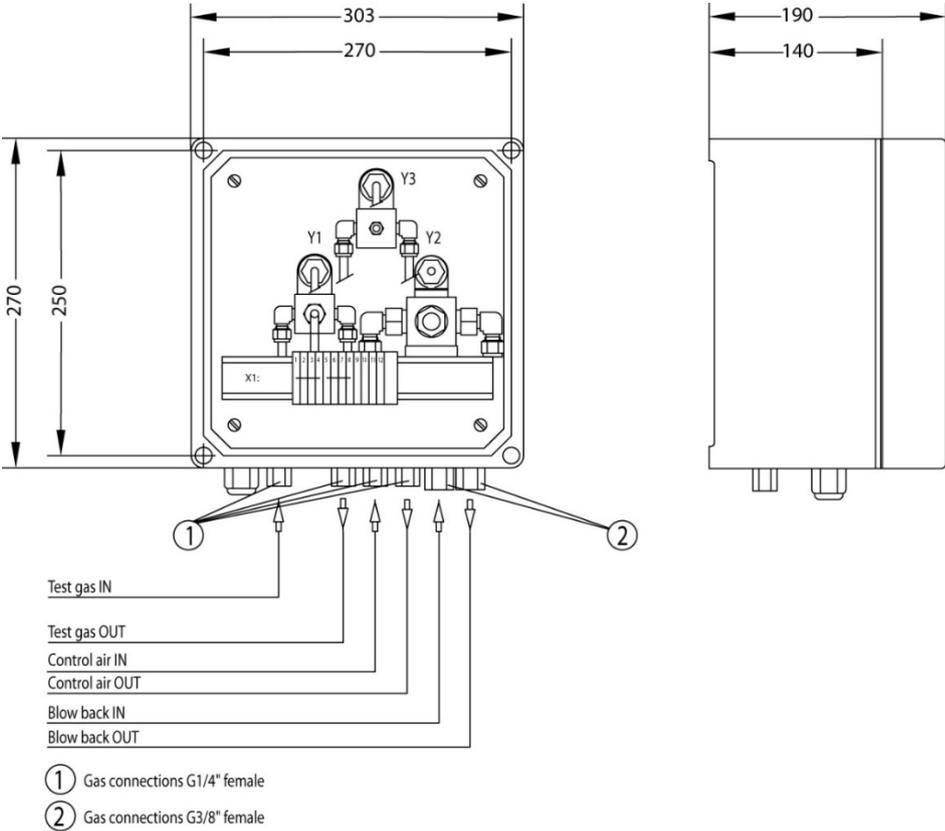

The control of the back-purge action is made via the electronic clock generator **K3** (Typ CT-MXS.22) that is equipped with 2 separate time adjustment possibilities for the impulse and the pause duration. During the impulse duration, the probe is back-purged. In the front of the clock generator are situated the adjustment possibilities for the time ranges (Range) and the potentiometer for the fine adjustment (Time). Thus, any back-purge and pause durations can be separately adjusted. For the fine adjustment (Time) the scale is valid which corresponds to the colour of the time range adjustment (Range).

Example:

The back purging shall be effected every 12 hours for totally 10 seconds.

Duration of the back purging: 10 s

Pause: 12 h

Adjustment "Duration of the back purging" (10 s): Set the potentiometer (Time 2) to 10 (white scale) and the time range (Range 2) to 10 s.

Adjustment "Pause" (12 h): Set the time range (Range 1) to 30 h and the potentiometer (Time 1) to 12 (orange scale).

17.4.1.2 Function and Adjustment of the Clock Generator K2

Via the clock generator **K2** (EZ12TI), the solenoid valve **Y2** (figure 15 and 16) for the feeding of back-purge gas is controlled. Here, you can adjust the lengths of the back-purge impulses and the pause durations between the back-purge impulses.



In the front of the clock generator **K2** the switch for the time basis T and the multiplier xT1 and xT2 is situated. The duration of the back purging, eg. 1 s is set with xT1 and the duration of the pause between the back-purge blows is set with xT2, eg 1 s.

Example:

Clock time and pause duration: 1 s

Adjust the time basis T at 0.5 s and the multiplier xT1 and xT2 at 2.

(2 x 0.5 s = 1 s)

17.4.1.3 Function and Adjustment of the Time Delay Relay K1



After the back-purge action, the time relay **K1** (EZ12AV) finishes the message “Back-purge” with a time delay of eg. 1 min and releases the measurement again in order to have sample gas in the analyzers when you switch over from back-purging to measuring.

In the front of the time relay, the switches for the time basis T and the multiplier xT are situated.

Example:

Delay time: 1 min.

Adjust the time basis T to 1 min. and the multiplier xT to 1 (1 x 1 min. = 1 min).

17.4.1.4 Function for Ball Valve Position NC “Normally Closed”

After actuation of the back-purge action by **K3** (type CT-MXS.22), the message purging is given via the time relay **K1** (EZ12AV), the control solenoid valve **Y1** (see figure 15 and 16) is closed and the ball valve returns in its rest position by spring return (back-purge).

The clock relay **K2** (type EZ12TI) is piloted for eg. 10 s and switches on and off again the back-purge solenoid valve **Y2** in a clock cycle of eg. 1 s.

After this, it is pause time in which the solenoid valve **Y1** is changed over again to the measuring gas sampling. At the same time, the time-delay relay is switched which – after a delay time of eg. 1 min. - finishes the message “purging” and releases again the measurement. This delay time is necessary in order to have active sample gas in the analyzers during switching over from purging to measuring.

17.4.1.5 Function for Ball Valve Position NO “Normally Open”

After actuating the back-purge action through **K3** (type CT-MXS.22), the message “purging” appears via the time relay **K1** (EZ12AV), the control solenoid valve **Y1** (see figure 15 and 16) is opened and the pneumatic drive moves the ball valve into position “back purging”.

The clock relay **K2** (type EZ12TI) is triggered for eg. 10 s by **K3** and switches on and off again the back-purge solenoid valve **Y2** in intervals of eg. 1 s.

After this, it is pause time in which the solenoid valve **Y1** is changed over again to the measuring gas sampling. At the same time, the time-delay relay is switched which – after a delay time of eg. 1 min. – finishes the message “purging” and releases again the measurement. This delay time is necessary in order to have active sample gas in the analyzers during switching over from purging to measuring.

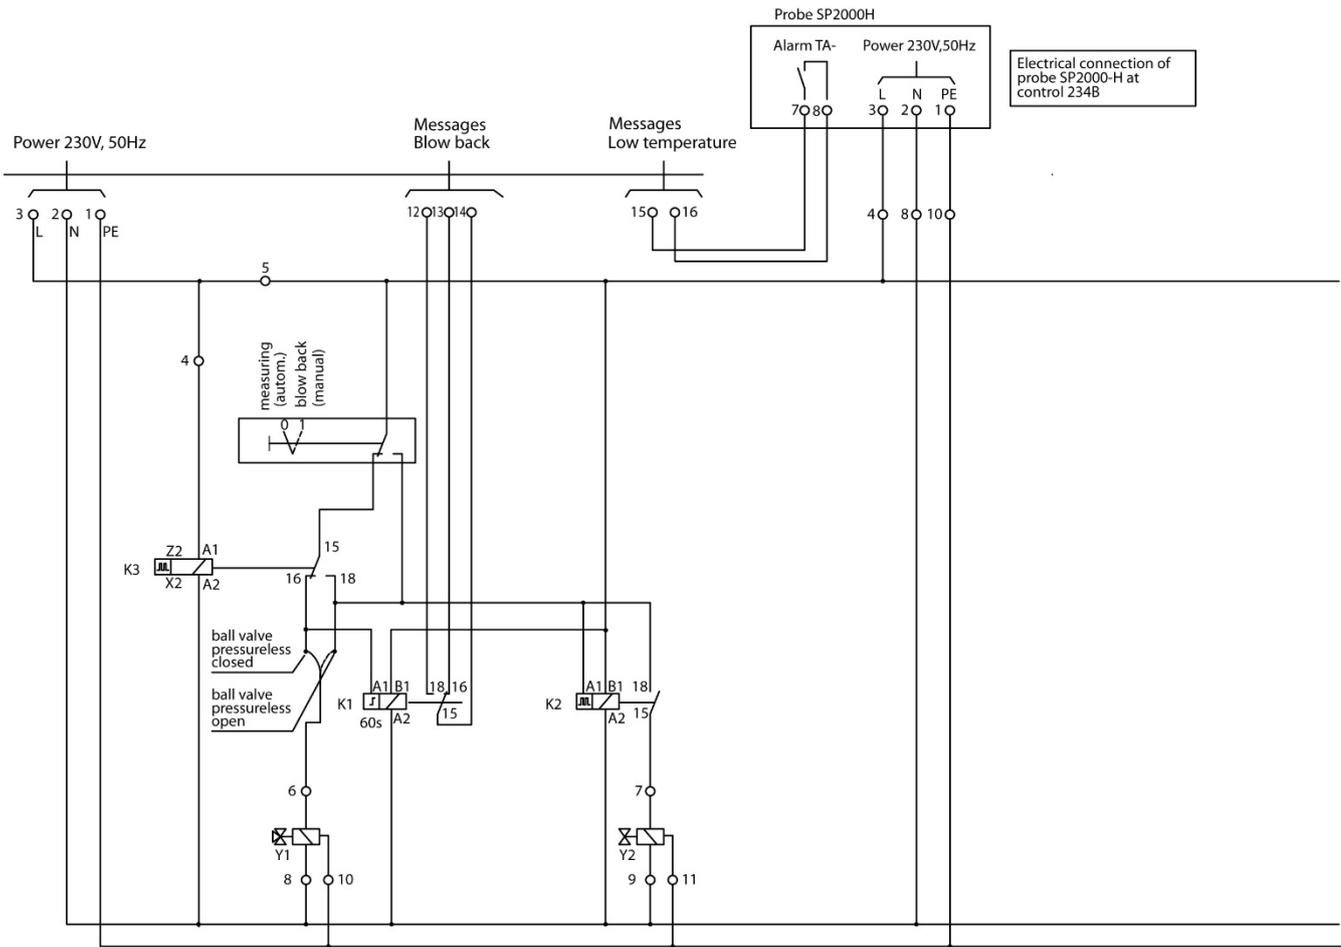


Figure 18 Wiring plan of control unit 234B

18 Maintenance

The safety instructions specific to the plant and process are to be consulted prior to any maintenance work ! It is difficult to give any recommendations as to a particular maintenance cycle. Depending on your process conditions, a meaningful maintenance cycle must be elaborated for the specific application.

An indication that probe-maintenance may be necessary could be shown by a constant decline in the amount of sample gas in the analysis system.

Probe maintenance is restricted essentially to replacing filter elements and checking seals.



Warning

Observe safety related operations specific guidelines for maintenance work !



Warning

Aggressive condensate is possible.



Wear protective glasses and proper protective clothing!



When working during operation:
High surface temperatures!



Wear protective gloves! Secure the device against unauthorized access.

18.1 Changing Filter Element and Checking Sealings

1. Close ball valve (if fitted). Flush probe in case of toxic gases!
2. Remove probe protection shield after opening pressure clamps.
3. Remove filter holder with lid as described in chapter 14.1.
4. Screw out the filter's knurled screw I, if existing put adapter L into the new filter element and renew filter element J.
5. Check filter element seals K and replace if necessary.
6. Check O-rings in the lid (flat graphite seal for /320H..., PTFE rings for /7aT) and change if necessary.

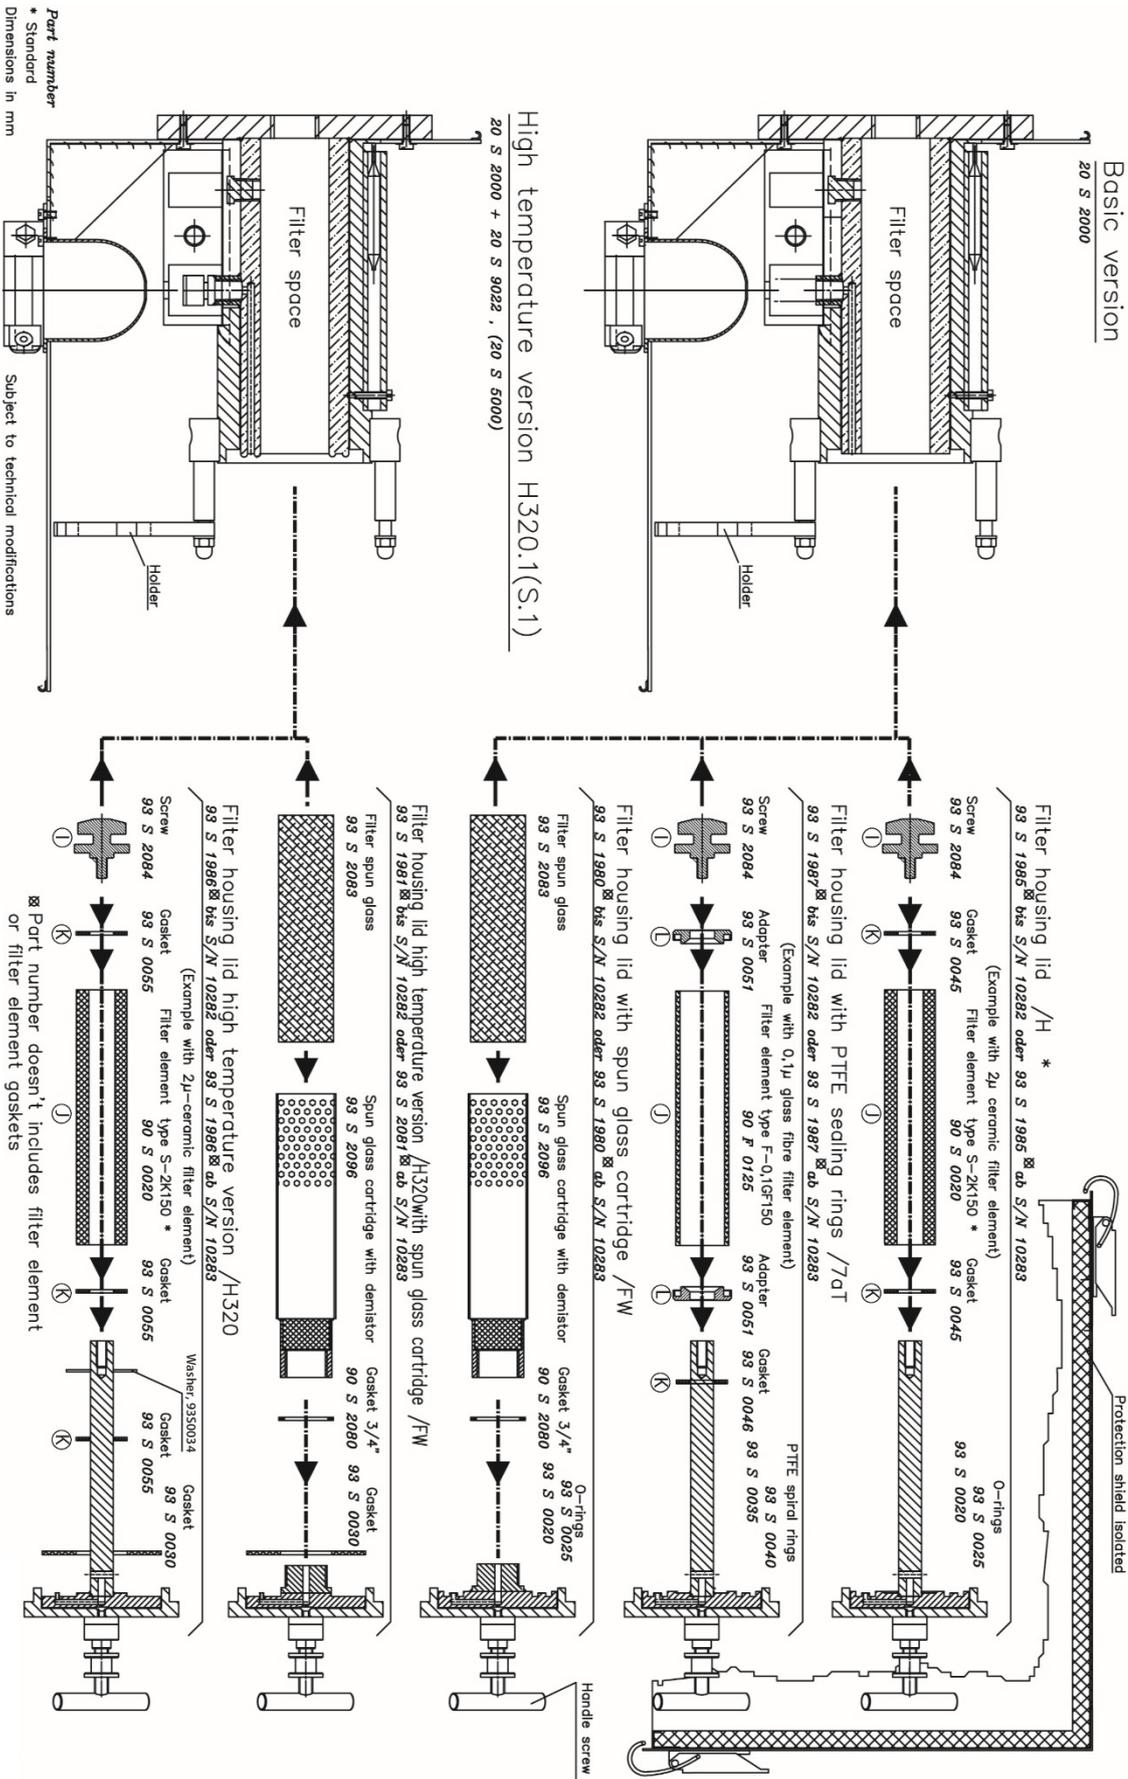


Figure 19 Filter elements and gaskets

1. Clean filter chamber.
2. It is now also possible to rod through the probe tube in order to remove deposits. **Caution danger of breakage** when handling probe tubes made of alu-oxide !
3. Replace filter holder with lid, turn handle **C** into position **F** and tighten lid with toggle **A** again.
4. Replace the protective hood and fasten with quick-release fasteners.
5. Open (if available) ball valve.

18.2 Change of the Optional Pre-filter

For changing the pre-filter the complete probe unit has to be dismantled and removed out of the process:



Warnung

When working during operation:
High surface temperatures!



Wear protective gloves! Secure the device against unauthorized access.

1. Loosen the 4 flange nuts and remove if possible the fixing screws (not for pre-filters V12..., adapter flanges or SP30-H...)
2. Extract probe with pre-filter out of the process.
3. Let pre-filters cool and than screw out resp. for pre-filters V12... remove the 4 flange nuts on probe side (see also Figure 6).
4. Change or clean pre-filter.



Note

Pre-filters depending on type and degree of contamination can be partly cleaned mechanically or in an ultra sonic bath and reused.

18.3 Change of Heating Cartridge and Thermostat



Warnung

Before effecting any maintenance work, the mains voltage has to be switched off on all poles! This is also valid for eventually connected alarm or control circuits.



1. Switch the probe free of tension (switch off the mains voltage) and let it cool down.
2. Open the toggle type fasteners and take off the protection cover.
3. Take off the lid of the electrical connection box after having unfastened the 4 screws.

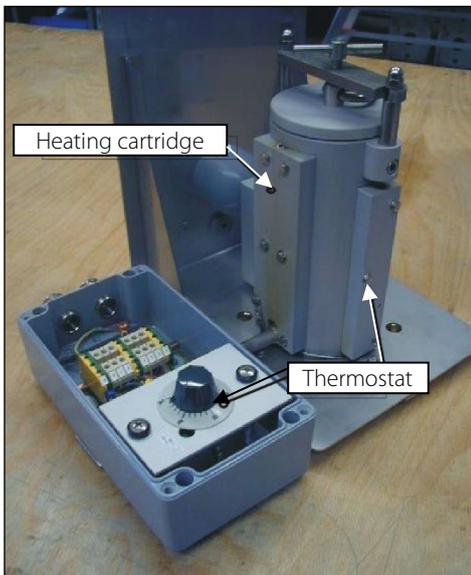


Figure 20 Position of Thermostat and heating cartridge

4. Unscrew the two hexagon head cap screws **A** (Figure 21) in the back board of the connection box with which this one is mounted to the retaining plate.

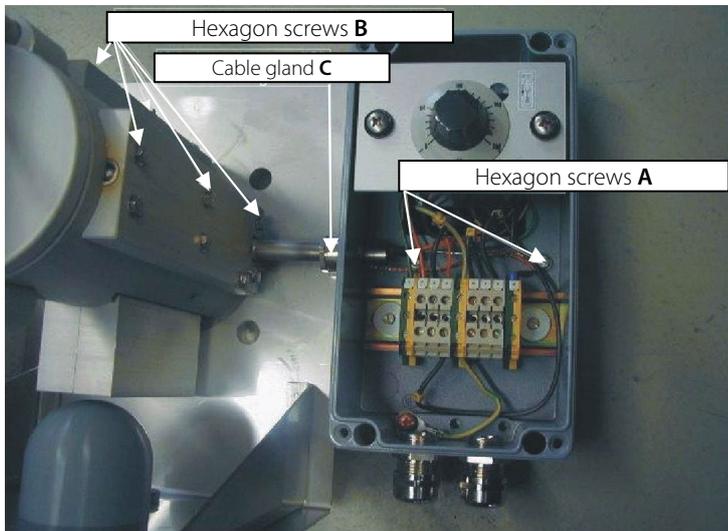


Figure 21 Position of fixing screws: connection box, thermostat sensor, heating cartridge carrier plate

5. Unscrew the hexagon head cap screws **B** (Figure 21) for the fastening of the heating cartridge retaining plate and the thermostat sensor retaining plate.
6. Remove the connection box including the heater cartridge and the thermostat sensor.



Figure 22 Dismounted electrical connection box with heating cartridge and thermostat sensor

7. Loosen the cable gland **C** (Figure 21) for the heating cartridge and the capillary tubes of the thermostat.
8. Disconnect the electrical connection lines of the heating cartridge and the thermostat from the terminal block (Figure 9).
9. Take off the turning knob from the thermostat. Remove the 2 locking screws **D** (Figure 23) beneath. Take off the locking screws **E** (Figure 23) of the thermostat retaining plate.

10. Draw the heating cartridge through the cable gland **C** (Figure 21) out of the connection box.
11. Draw out the thermostat sensor through the cable gland in the opposite direction.
12. Mount the new thermostat and lead the thermostat sensor from inside through the cable gland.
13. Feed the new heating cartridge from outside through the cable gland.
14. Connect the electrical cables according to the connection plan (Figure 9).
15. Mount the complete unit to the probe again.

The thermostat is equipped with a mechanical stop that limits the maximum temperature adjustable via the turning knob.

When mounting the thermostat pay attention that the mechanical stop is mounted so that the arrow on the metallic ring shows to the desired maximum temperature. (Standard adjustment 190 °C [374 °F]).

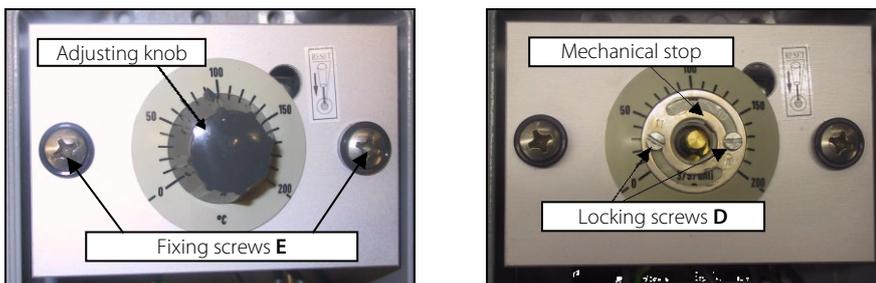


Figure 23 Adjustment of the mechanical stop at the thermostat controller

If you use gas sample probes with temperature sensor (Pt100 or thermoelement) instead of the thermostat, lead the sensor connecting cable with the heating cartridge through the cable gland. In order to do this, put the connecting cable into the corrugation of the sealing rings and the two metal rings.

19 Switching Off

Caution Before switching off, i.e. switching off the heating, the gas flow via probe has to be stopped and the probe has to be flushed with inert gas or air in order to avoid condensation of aggressive components from the process gas.

20 Proper Disposal of the Device

At the end of the service life of our products, it is important to take care of the appropriate disposal of obsolete electrical and non-electrical devices. To help protect our environment, follow the rules and regulations of your country regarding recycling and waste management.

21 Spare Part List

Wear, tear and replacement part requirements depend on specific operating conditions. The recommended quantities are based on experience and are not binding.


Gas sample probe SP2000, SP2000-H, SP2300-H, SP2400-H					
(C) Consumable parts					
(R) Recommended spare parts					
(S) Spare parts					
		Recommended quantity being in operation [years]			
Part No.	Description	C/R/S	1	2	3
90S0020	Filter element S-2K150 , ceramic, 2 µm, 150 mm	C	6	12	18
90F0125	Filter element F-0,1GF150 , glass fiber, 0.1 µm, 150 mm	C	6	12	18
93S2083	Special spun-glass hightemperature resistant for probes with /FW insert. Contents:1000 g.	C	1	2	3
93S0045	Gasket (30) for filter element. Material: Viton®.	R	4	8	12
93S0055	Gasket (30) for filter element. Material: graphite.	R	4	8	12
93S0046	Gasket (30) for filter element. Material: PTFE	R	4	8	12
93S0020	O-ring (39) for lid. Material: Viton®.	R	2	4	8
93S0025	O-ring (55) for lid. Material: Viton®.	R	2	4	8
93S0030	Gasket (69) for lid SP2000-H320. Material graphite	R	2	4	8
93S0034	Washer for graphite gasket/filter housing lid for sample probe type SP2000-H320	R	-	-	1
93S0035	Sealing spiral o-ring (39) for SP2000/7aT. Material: PTFE.	R	1	2	3
93S0040	Sealing spiral o-ring (55) for SP2000/7aT. Material: PTFE.	R	1	2	3
90S2080	Gasket 3/4" for spun glass cartridge FW, insitu probe tubes, pre-filter V20, extension tubes. Material: Novapress®.	R	1	2	3
90S2077	Flange gasket DN 65 PN 6B (67). Material: Novapress®.	R	1	1	1
90S2075	Flange gasket set for DN 65 PN 6B consisting of gasket (67) and a set of screws M 12 x 60.	S	1	1	1
93S0010	Thermostat (0 - 180 °C [32 to 356 °F]), with over-temperature limiter and low-temperature alarm for probe series SP.	R	-	-	1
93S0011	Thermostat (0 – 320 °C [32 to 608 °F]), with over-temperature limiter and low-temperature alarm for probe series SP.	R	-	-	1
93S0015	Heating cartridge for SP2000-H, L=160 mm, 230 V/800 W.	R	-	-	1
93S0017	Heating cartridge for SP2000-H, L=160 mm, 115 V AC/800 W.	R	-	-	1
93S0059	Pt100 sensor (spare)	R	-	-	1
93S0060	Spare thermoelement Fe-CuNi	R	-	-	1
93S0061	Spare thermoelement NiCr-Ni	R	-	-	1

22 Risk Assessment

The risk assessment provided in this chapter is intended for all work activities on the product. The hazards can occur in the work steps of assembly, commissioning, maintenance, disassembly and in the event of a product fault. During normal operation, the product is protected by a system cabinet or appropriate covers. Only qualified personnel is permitted to perform the work. The following minimum knowledge is required for the work:

- Employee instruction provided in process engineering
- Employee instruction provided in electrical engineering
- Detailed knowledge of the instruction manual and the applicable safety regulations

The product complies with the current regulations according to state-of-the-art science and technology. Nevertheless, not all sources of danger can be eliminated while observing technical protective measures. Therefore, the following risk assessment and the description of exposure hazards refer to the work steps mentioned above.

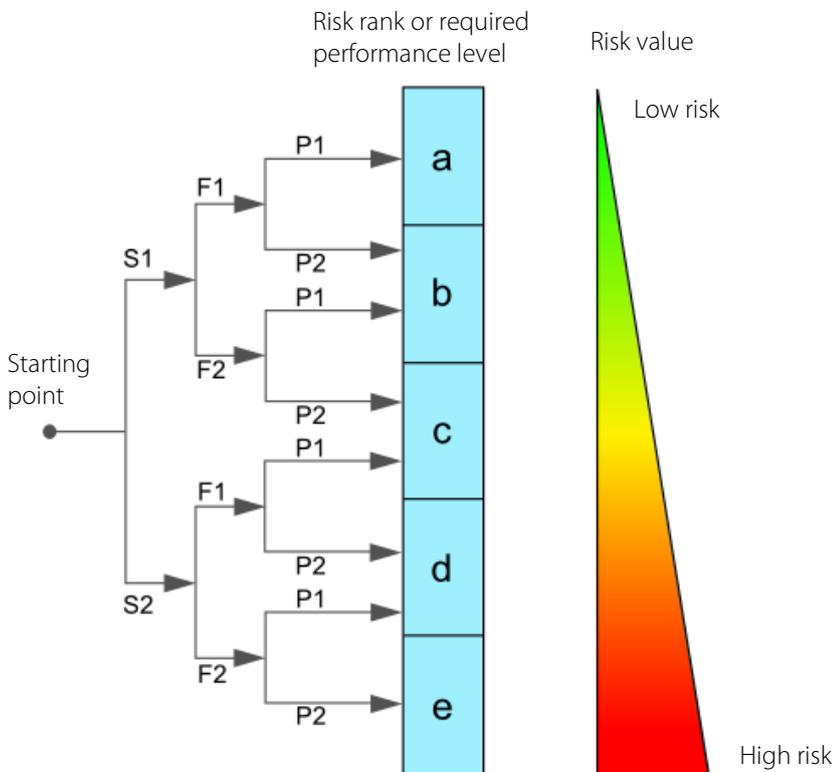

Severity of injury:

S1 = 1 = minor (reversible injury)

S2 = 2 = serious (irreversible injury, death)

Frequency and duration:

F1 = 1 = infrequent or short exposure to hazard

F2 = 2 = frequent (more than once per hour/shift)

Possibility of preventing or limiting the damage

P1 = 1 = possible

P2 = 2 = hardly possible

Figure 24 Overview risk assessment



Aggressive condensate possible

Risk rank group A

Chemical burns due to aggressive media possible!

This applies to all liquids in vessels and in the product.

In general, for electrical and mechanical work on the product, wear personal protective equipment (PPE) in accordance with the risk assessment.



Caution hot surfaces

Risk rank group A

The temperature inside the product can be higher than 180 °C.

The hot parts are shielded by mechanical devices. Before opening the products, they must be disconnected from the power supply and a cooling time of more than 180 minutes must be observed. In general, for electrical and mechanical work on the product, wear personal protective equipment (PPE) in accordance with the risk assessment.



Caution electric shock

Risk rank group C

When installing high-power systems with nominal voltages of up to 1000 V, the requirements of VDE 0100 and their relevant standards and regulations must be observed!

This also applies to any connected alarm and control circuits. Before opening the products, they must always be disconnected from the power supply.



Gas hazard

Risk rank group A-B-C

The hazard potential mainly depends on the gas to be extracted.

If toxic gases, oxygen displacing or explosive gases are conveyed with the product, an additional risk assessment by the operator is mandatory.

In principle, the gas paths must be purged with inert gas or air before opening the gas-carrying parts.

The escape of potentially harmful gas from the open process connections must be prevented.

The relevant safety regulations must be observed for the media to be conveyed. If necessary, flush the gas-carrying parts with a suitable inert gas. In the event of a gas leakage, the product may only be opened with suitable PPE or with a monitoring system. Furthermore, the work safety regulations of the operator must be observed.

**Caution crushing hazard****Risk rank group A**

The work must be performed by trained personnel only.

This applies to products weighing less than 40 kg [≈ 88.2 lbs]:

The product can be transported by 1 to 2 person(s). The instructions for appropriate personal protective equipment (PPE) must be observed.

The weight specifications are contained in the technical data of this product.

Furthermore, the work safety regulations of the operator must be observed.

23 Connection and Mounting Data

Gas sample probe type	SP2000	SP2000-H	SP2300-H	SP2400-H
Dimensions (W x H x D)	340 x 260 x 345 mm			
Material filter housing	SS 316Ti (standard)		PTFE-Ko	Titanium
Sealing materials	FKM (standard) /7aT* = PTFE /H320* = Graphite			
Material probe flange gasket	Novapress®			
Low temperature alarm contact		Switching capacity: 250 V, 3 A~, 0,25 A=, switching point: ΔT 30 °C		
Connection gas outlet / second gas outlet	1 x 1/4" NPT I (standard) for tube connection Ø 6, 8 or 10 mm*, /H320* = 6 mm (standard) or 8 mm*			
Blow back-/test gas connection	1/4" NPT I (standard), /R* and H320* = tube Ø 6 mm			
Power supply / wattage / fuse protection		230 V 50/60 Hz, 800 W, /115 V* = 115 V 60 Hz, 800 W fuse protection 10 A		
Electrical connection		Terminals max. 4 mm ² , 2 x M 20 x 1.5 cable gland		
Mounting flange	DN 65 PN 6, form B, 1.4571 (standard), > DN or ANSI possible*, /HP*=DN 50 PN 25			

Controller type	70304G
Dimensions (W x H x D)	150 x 250 x 145 mm
Status signal output	Low temperature alarm: 1 contact NO, potential free. Switching capacity max. 250 V AC 3 A
Electrical connection	Terminals max. 4 mm ² , 4 x M 20 x 1.5 cable gland
Power supply	115 V 50/60 Hz 1725 VA, 230 V 50/60 Hz 3450 VA

Pneumatic ball valve drive type	MS1 and MS3
Connection control line	G 1/4" i

Electrical ball valve drive type	EA
Status signal output	Position end switch 250 V AC, 11 A AC, 0.25 A DC* (mains potential)
Electrical connection	Terminals max. 4 mm ² , 2 x M 20 x 1.5 cable glands
Power supply	230 V 50 Hz, 140 W (115 V 60 Hz or 24 V DC)
Status signal potential free*	2 x position end switch, potential free, open/closed, 250 V, 16 A

Solenoid valve units type	2	3
Dimensions (W x H x D)	270 x 270 x 150 mm	270 x 270 x 190 mm
Pneumatic connections	2 x control air G 1/4" i 2 x blow back G 3/8" i	2 x control air G 1/4" i 3 x blow back G 3/8" i
Elektrical connections	Terminals max. 4 mm ² , 3 x M 20 x 1.5 cable gland	
Power supply	115 V 50/60 Hz 20 W, 230 V 50/60 Hz 20 W, 24 V DC 20 W	

*optional

24 Appendix

- Dimensions/construction
- Sampling possibilities
- Ball valve options and test gas feeding / blow back
- 3/2-way ball valve and pneumatic drive (4 drawings)



More product documentation is available on our Internet catalogue:
www.mc-techgroup.com

- Data sheet: sample tubes series **SP**
- Data sheet: pre-filter series **SP**

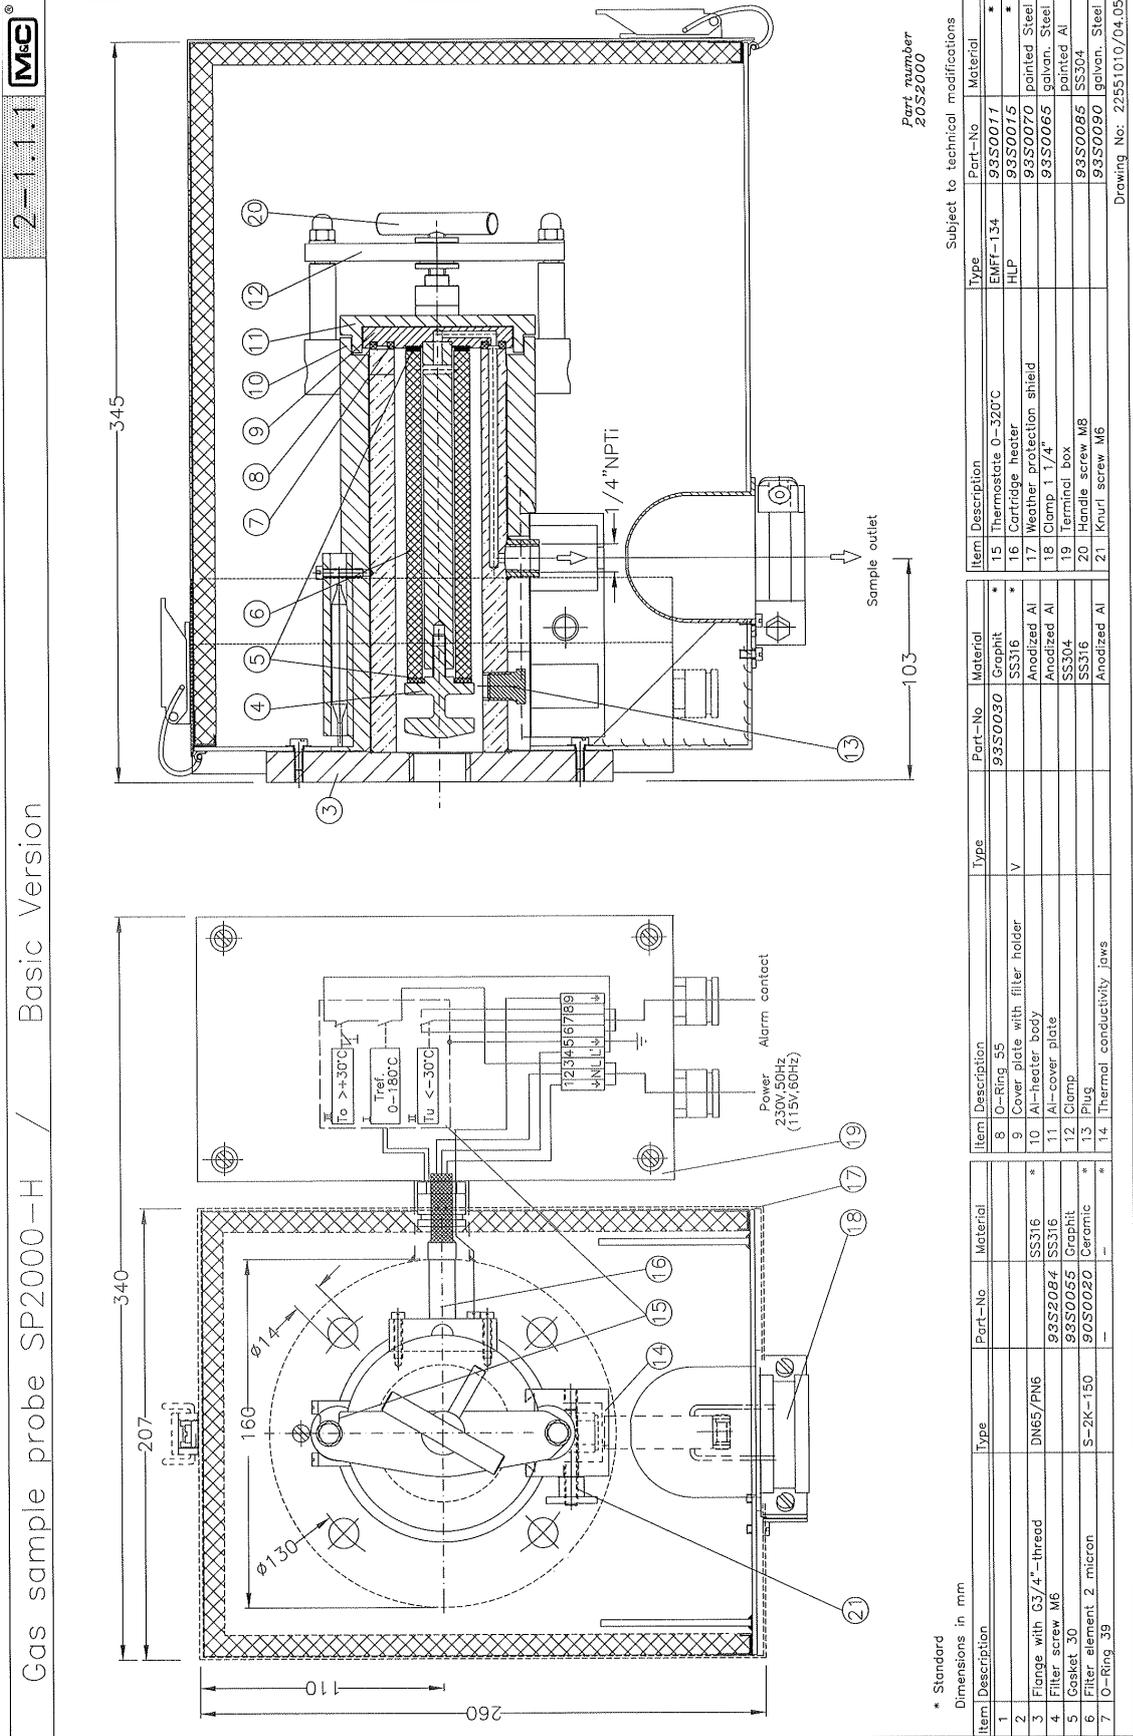


Figure 25 SP2000-H basic version

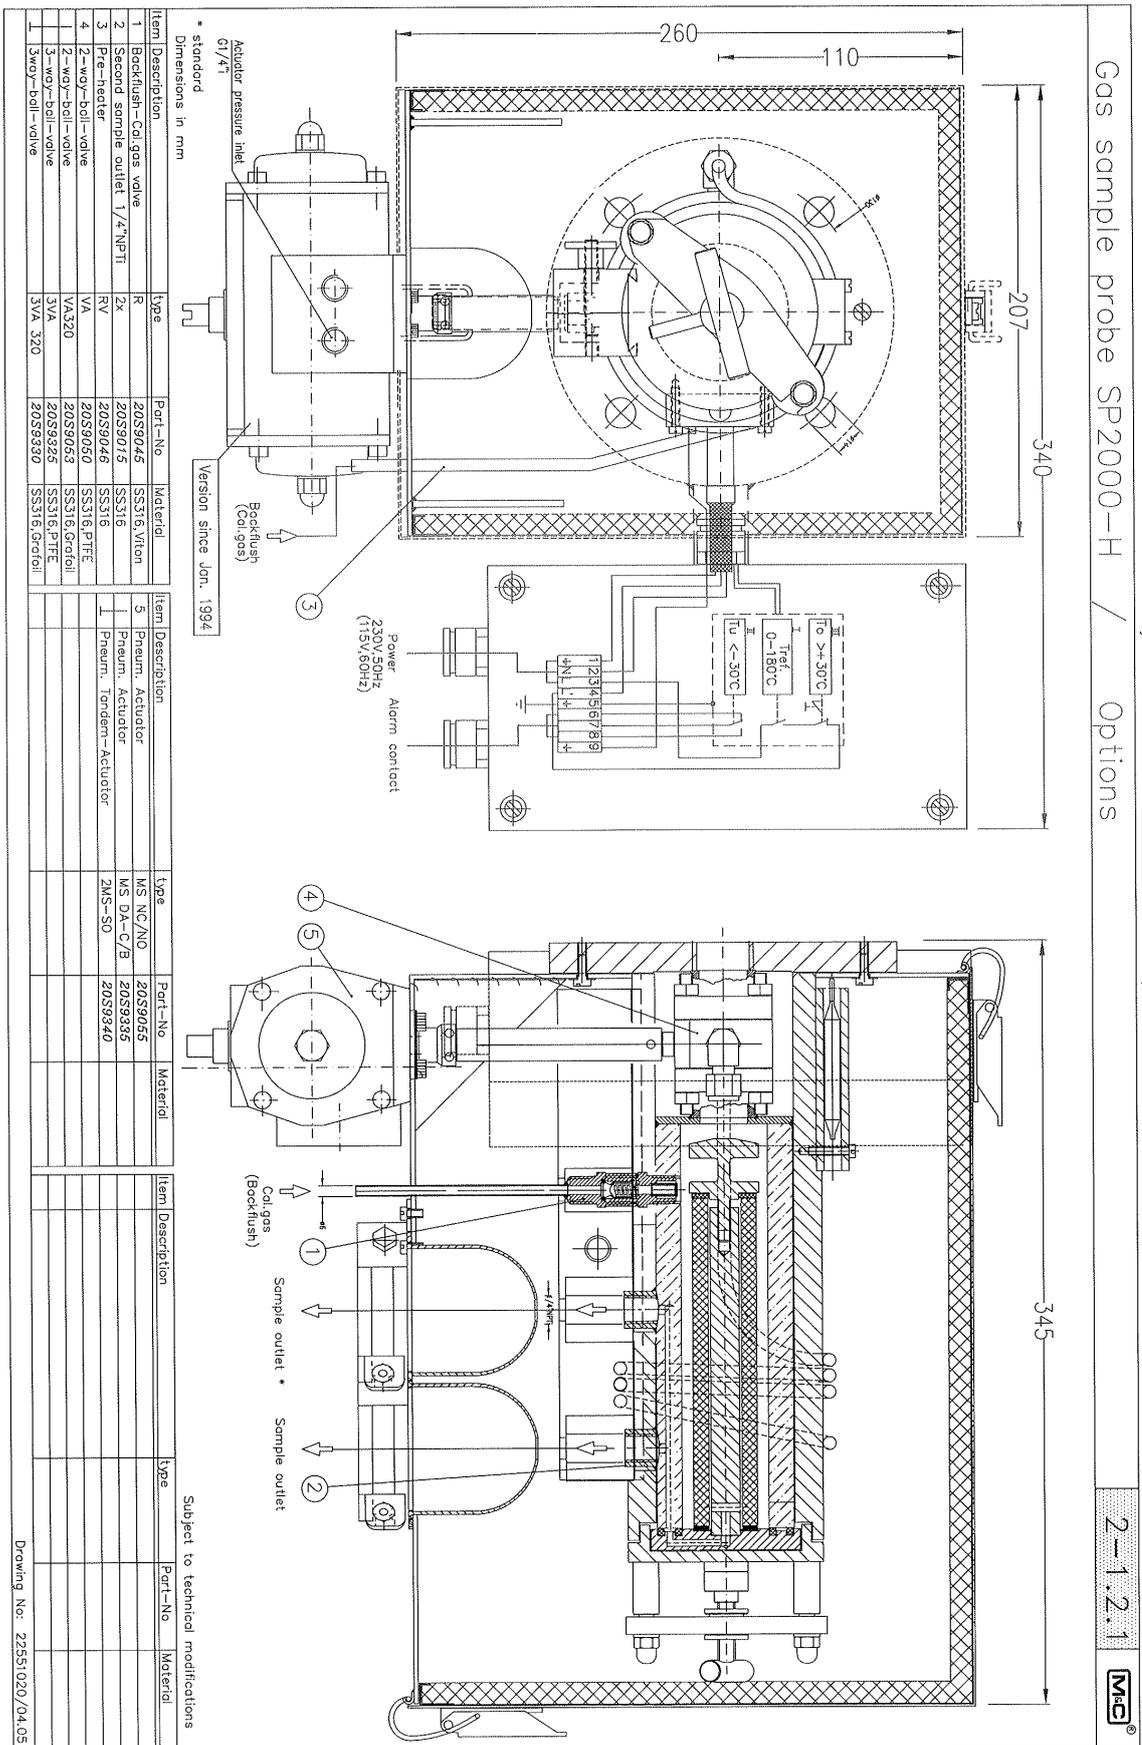


Figure 26 SP2000-H with options


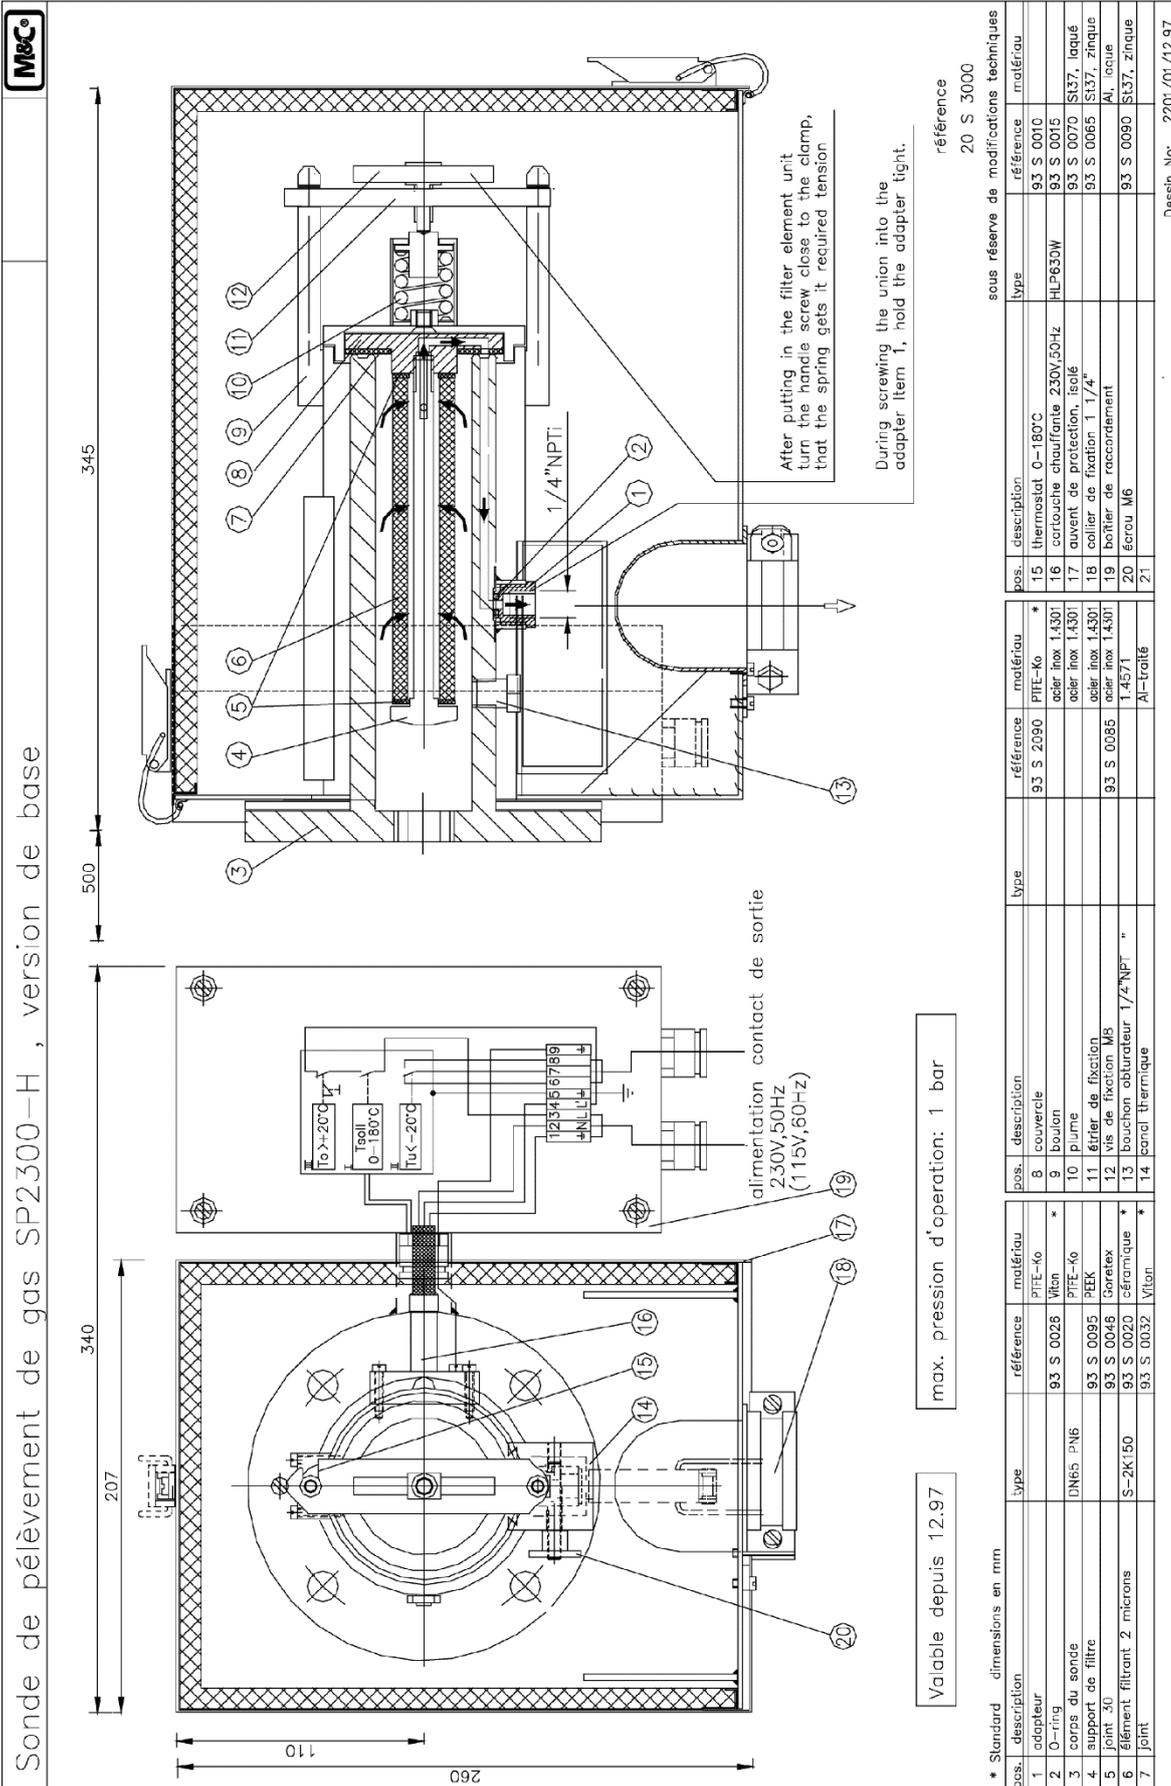


Figure 27 SP2300-H

Gas sample probe SP2300-H / Filter elements

2.21

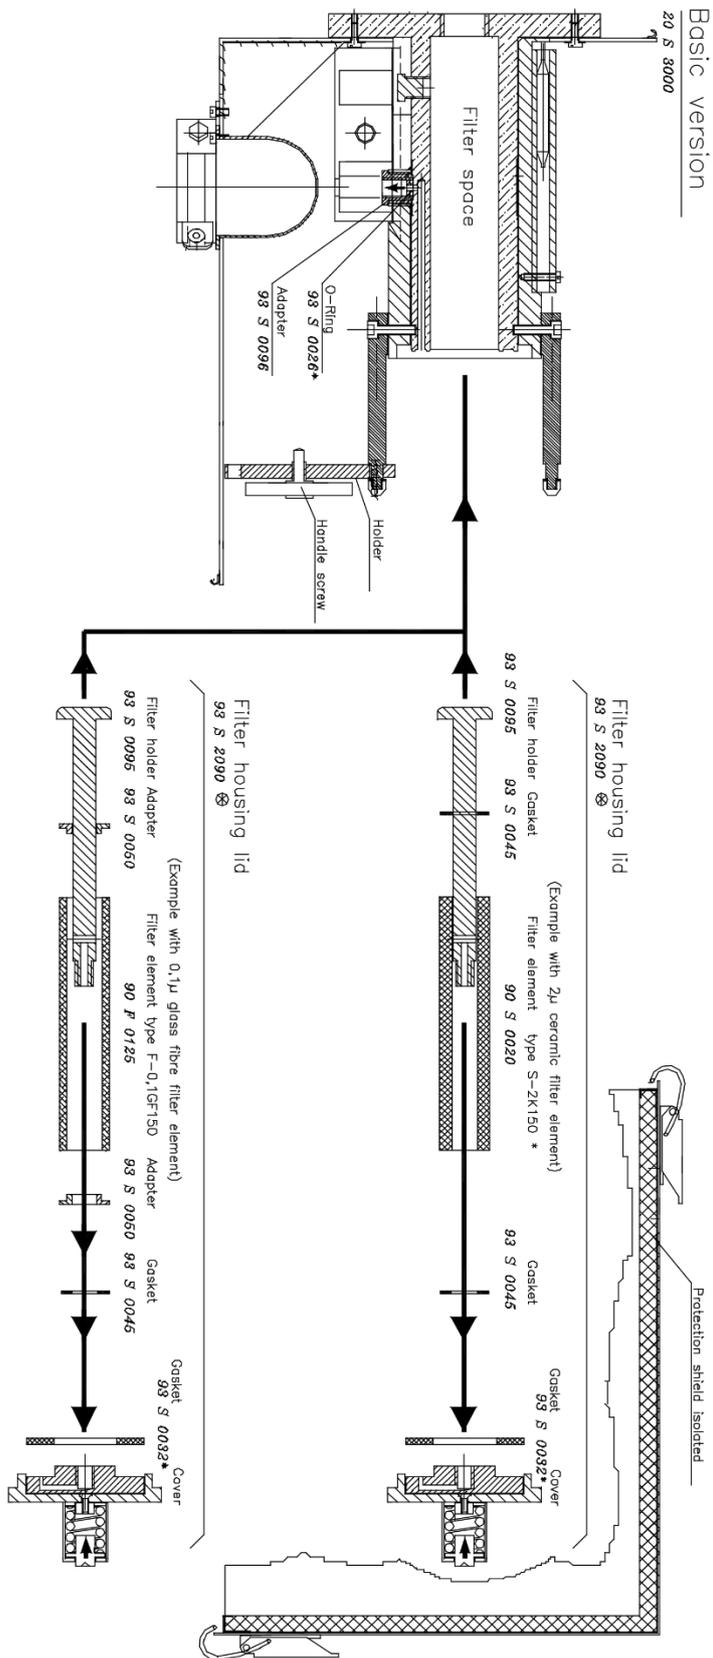

Part number
* Standard

Dimensions in mm Subject to technical modifications

Version since 12.97

Max. operating over pressure: 1 bar

* Part number doesn't include filter element or filter element gaskets

Drawing No: 22551055/12.08

Figure 28 SP2300-H filter elements




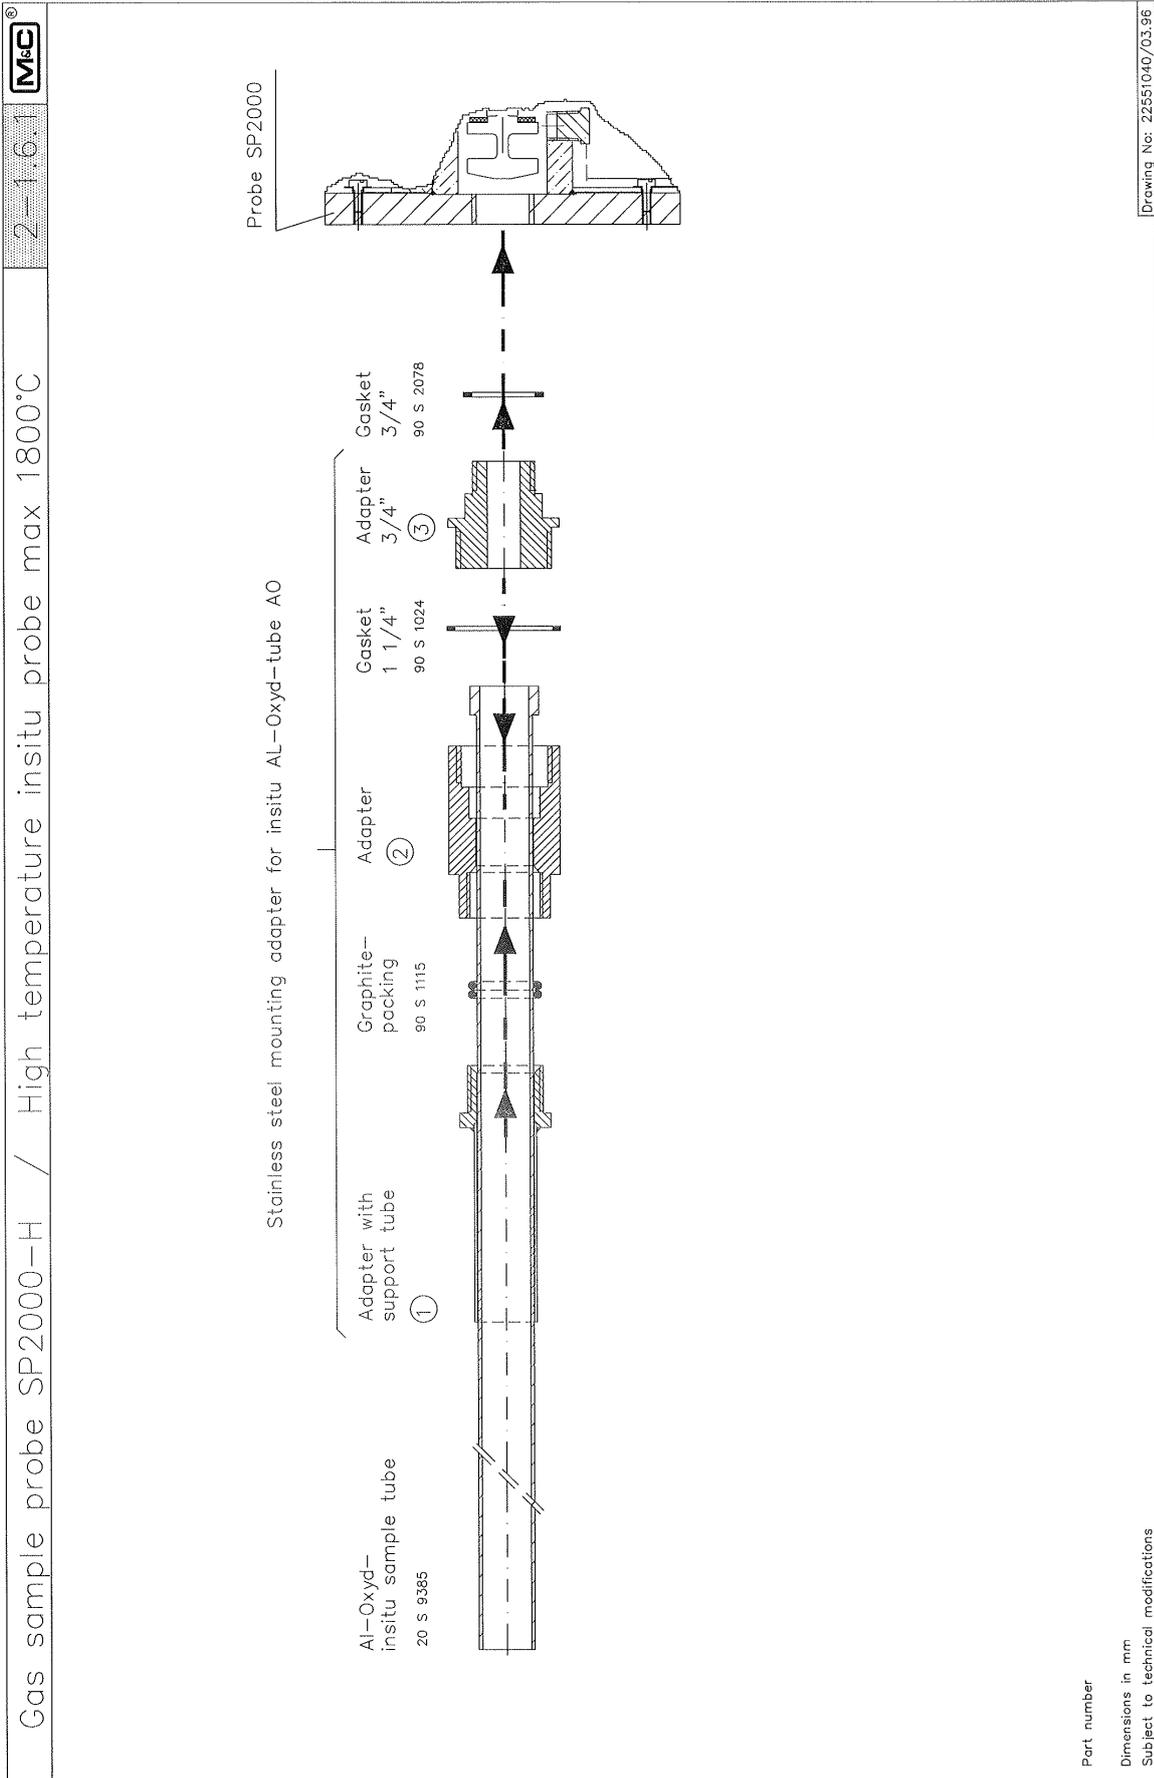


Figure 29 High temperature tube aluminium oxide AO

Electr. heated sample tube SP30-H1.1/-H2

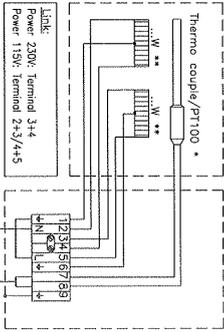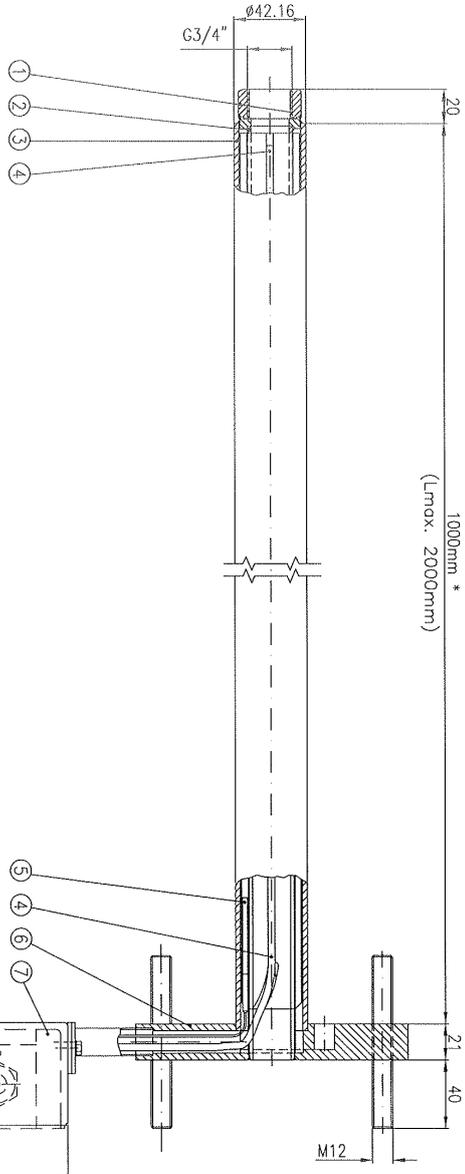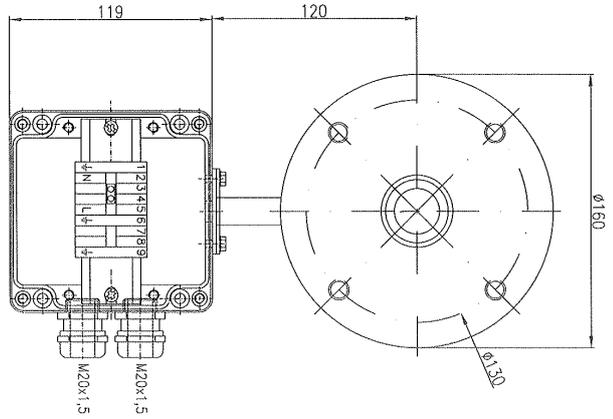

Part No.	Type	Material	Tube length *	Temperature sensor	Heater cartridge **	Temp. max.
02S9029	SP30-H1.1	600mm	Thermo couple Fe-CuNi	2x300W	320°C	
02S9029	SP30-H1.1	1000mm	Thermo couple Fe-CuNi	2x400W	320°C	
02S9029	SP30-H1.1	1500mm	Thermo couple Fe-CuNi	2x500W	320°C	
02S9029	SP30-H1.1	2000mm	Thermo couple Fe-CuNi	2x500W	320°C	
02S9029	SP30-H1.1/HC	600mm	Thermo couple Fe-CuNi	2x300W	320°C	
02S9029	SP30-H1.1/HC	1000mm	Thermo couple Fe-CuNi	2x400W	320°C	
02S9029	SP30-H1.1/HC	1500mm	Thermo couple Fe-CuNi	2x500W	320°C	
02S9029	SP30-H1.1/HC	2000mm	Thermo couple Fe-CuNi	2x500W	320°C	
02S9029	SP30-H2	600mm	Thermo couple Fe-CuNi	2x300W	200°C	
02S9029	SP30-H2	1000mm	Thermo couple Fe-CuNi	2x400W	200°C	
02S9029	SP30-H2	1500mm	Thermo couple Fe-CuNi	2x500W	200°C	
02S9029	SP30-H2	2000mm	Thermo couple Fe-CuNi	2x500W	200°C	

*Standard Dimensions in mm

Power 230V (115V/50Hz) Thermo/PT100

Part No. Subject to technical modifications

Item	Description	Type	Part-No.	Material	Item	Description	Type	Part-No.	Material
1	Muffe G3/4"			SS316	6	Flange DN65 PN6			Al. painted
2	Tube 42,16x2,77			1.4539	7	terminal box			
3	Tube 26,67x2,11			1.4539	8				
4	Heater cartridge			RP **	9				
5	Thermo couple			Fe-CuNi	10				
5.1	Sensor			PT100	11				
					12				
					13				
					14				
					15				
					16				
					17				
					18				
					19				

Drawing-No. 22091024/08.04

Figure 30 Heated sample tubes SP30-H...

Gasentnahmesonde/Sample probe SP2000-H.../...VA...		2-1.3.5	
Version mit 2-Wege-Kugelhahn zum Absperren für Prüfgasaufgabe oder Service Anwendungsempfehlung: Filterwechsel, Reinigung usw. bei über-/Unterdruck, giftigen, korrosiven Gasen. Type with 2-way ball valve to shut off for calibration or maintenance. Recommended application: filter changing, cleaning etc. at over- or underpressure conditions, poisonous or corrosive samples.			
Funktion / function	Version / type	2-Wege-Kugelhahn VA	/2-way ball valve VA
2-Wege-Kugelhahn VA zum Absperren der Gasentnahmesonde vom Prozess.	Gasentnahmesonde / Sample probe SP2000-H/VA		
2-way ball valve VA for shut off the sample probe from process.			
2-Wege-Kugelhahn VA zum Absperren der Gasentnahmesonde vom Prozess Prüfgasaufgabe über Rückschlagventil R.	Gasentnahmesonde / Sample probe SP2000-H/R/VA		
2-way ball valve VA for shut off the sample probe from process. Calibration gas trough checkvalve R.			
2-Wege-Kugelhahn VA mit pneum. Antrieb MS zum aut. Absperren der Gasentnahmesonde vom Prozess.	Gasentnahmesonde / Sample probe SP2000-H/VA/MS-NC (NO)		
2-way ball valve VA with pneum. actuator MS for aut. shut off the sample probe from process.			
2-Wege-Kugelhahn VA mit pneum. Antrieb MS zum aut. Absperren der Gasentnahmesonde vom Prozess. Prüfgasaufgabe über Rückschlagventil R.	Gasentnahmesonde / Sample probe SP2000-H/R/VA/MS-NC (NO)		
2-way ball valve VA with pneum. actuator MS for aut. shut off the sample probe from process. Calibration gas trough checkvalve R.			
		Zeichn.-Nr.: / Drawing No: 22551110 /07.05	

Gasentnahmesonde/Sample probe SP2000-H.../...VA...		2-1.3.5	M&C
Version mit 3-Wege-Kugelhahn zum Absperrn für Rückspülen, Prüfgasaufgabe oder Service Anwendungsempfehlung: Filterwechsel, Reinigung usw. bei Über-/Unterdruck, giftigen, korrosiven Gasen.			
Type with 3-way ball valve to shut off for backflush, calibration or maintenance. Recommended application: filter changing, cleaning etc. at over- or underpressure conditions, poisonous or corrosive samples.			
Funktion / function	Version / type	3-Wege-Kugelhahn 3VA / 3-way ball valve 3VA	
3-Wege-Kugelhahn 3VA zum Absperrn der Gasentnahmesonde vom Prozess. Rückspülung und Prüfgas-aufgabe über Kugelhahn 3VA.	Gasentnahmesonde / Sample probe SP2000-H/3VA		
3-way ball valve 3VA to shut off the sample probe from process. Backflush and calibration through 3-way ball valve 3VA.			
3-Wege-Kugelhahn 3VA mit pneum. Antrieb MS (0-90°) zum autom. (Fernsteuerung) Absperrn der Gasentnahmesonde vom Prozess. Rückspülung (MS-B) oder Prüfgas-aufgabe (MS-C) über Kugelhahn 3VA.	Gasentnahmesonde / Sample probe SP2000-H/3VA/MS-C (MS-B)		
3-way ball valve 3VA with pneum. actuator MS (0-90°) to shut off the sample probe from process automatically. Backflush (MS-B) or calibration (MS-C) through 3-way ball valve 3VA.			
3-Wege-Kugelhahn 3VA mit pneum. Antrieb MS (0-90°) zum autom. (Fernsteuerung) Absperrn der Gasentnahmesonde vom Prozess. Rückspülung über Kugelhahn 3VA. Prüfgas-aufgabe über Rückschlagventil R.	Gasentnahmesonde / Sample probe SP2000-H/R/3VA/MS-B		
3-way ball valve 3VA with pneum. actuator MS (0-90°) to shut off the sample probe from process automatically. Backflush through 3-way ball valve 3VA. Calibration through check valve R.			
3-Wege-Kugelhahn 3VA320 mit pneum. Antrieb 2MS-SO (0-90-180°) zum autom. Absperrn der Gasentnahmesonde vom Prozess. Rückspülung und Prüfgas-aufgabe über Kugelhahn 3VA.	Gasentnahmesonde / Sample probe SP2000-H320/3VA320/2MS-SO		
3-way ball valve 3VA320 with pneum. actuator 2MS-SO (0-90-180°) to shut off the sample probe from process automatically. Backflush and calibration through 3-way ball valve 3VA.			
		Zeichn.-Nr. / Drawing No: 22551110/Bl.2/03.05	

Figure 31 Test gas feeding and blow back possibilities

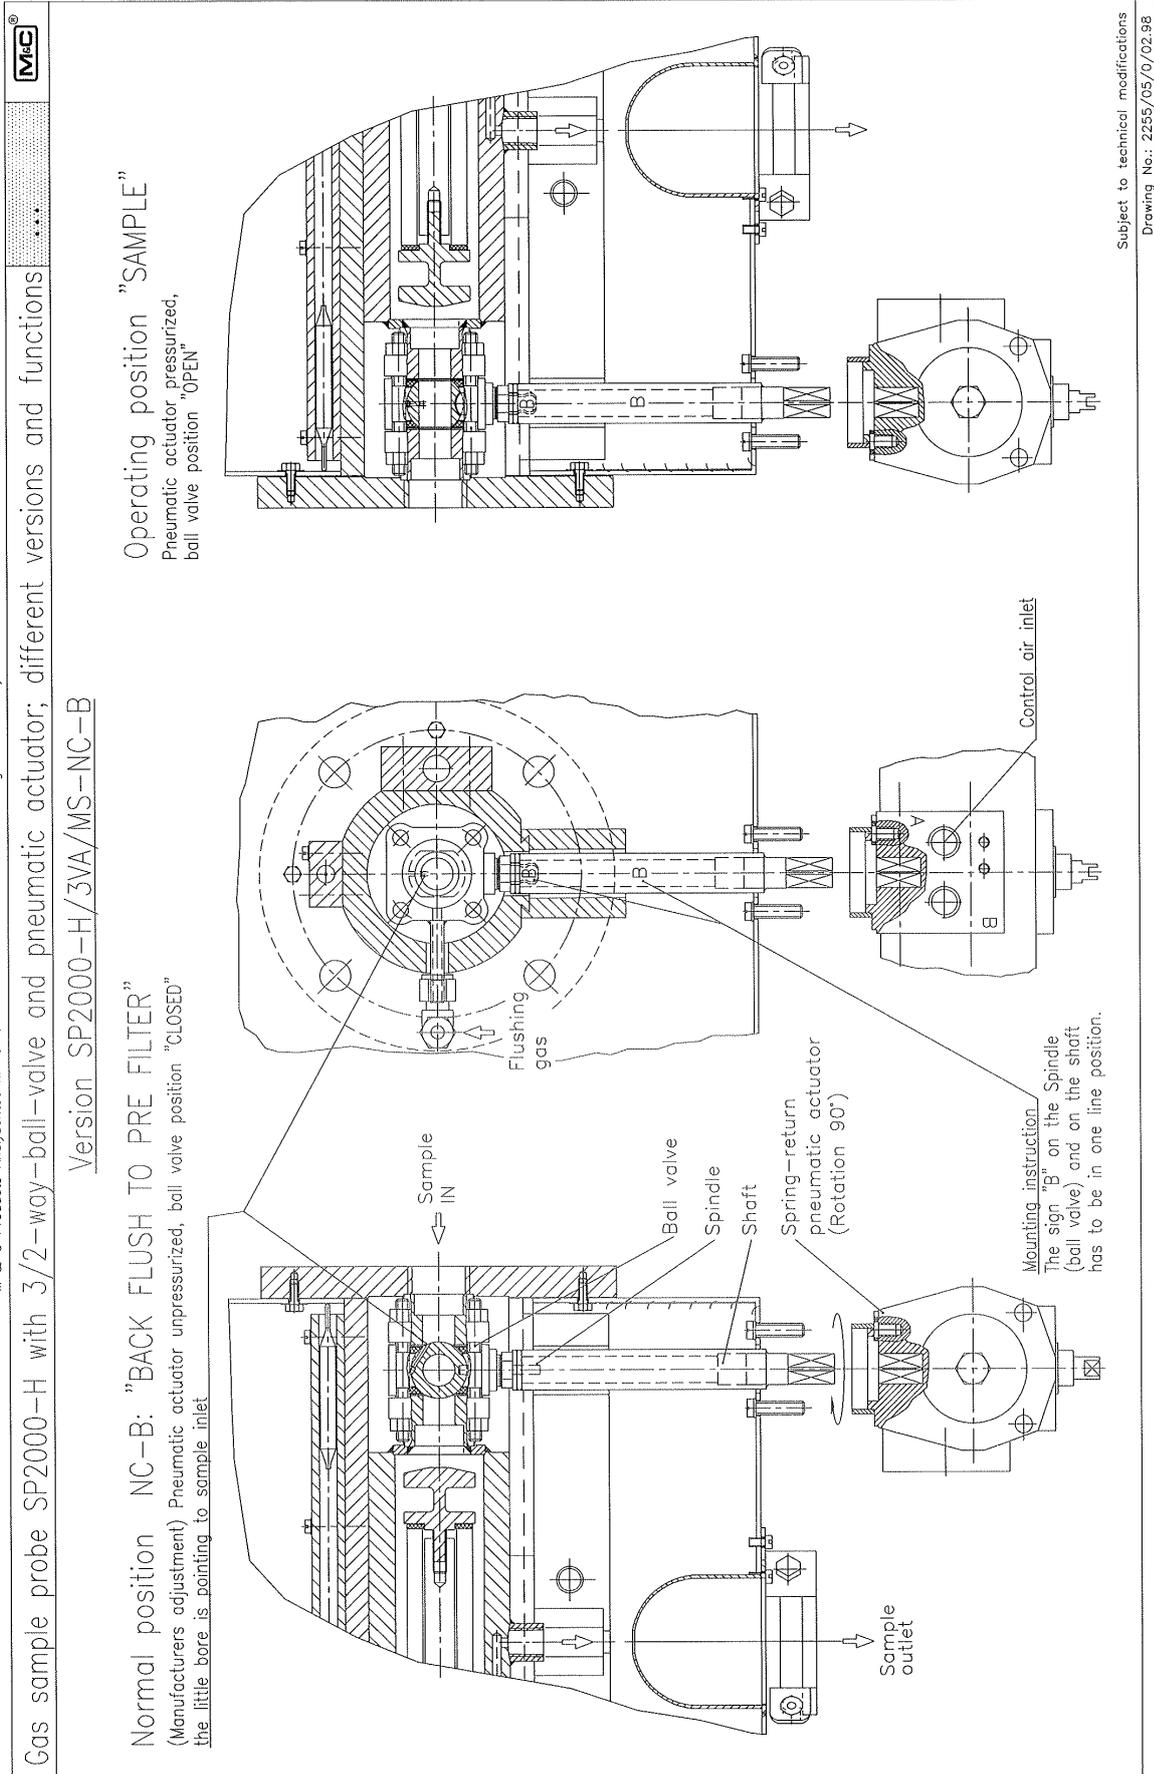


Figure 32 SP2000-H/3VA/MS-NC-B


Gas sample probe SP2000-H with 3/2-way-ball-valve and pneumatic actuator; different versions and functions



Version SP2000-H/3VA/MS-NC-C

Normal position NC-C: "CAL. GAS or BACK FLUSH TO ANALYSIS"
 (Manufacturers adjustment) Pneumatic actuator unpressurized, ball valve position "CLOSED",
 the little bore is pointing to filter housing

Operating position "SAMPLE"
 Pneumatic actuator pressurized,
 ball valve position "OPEN"

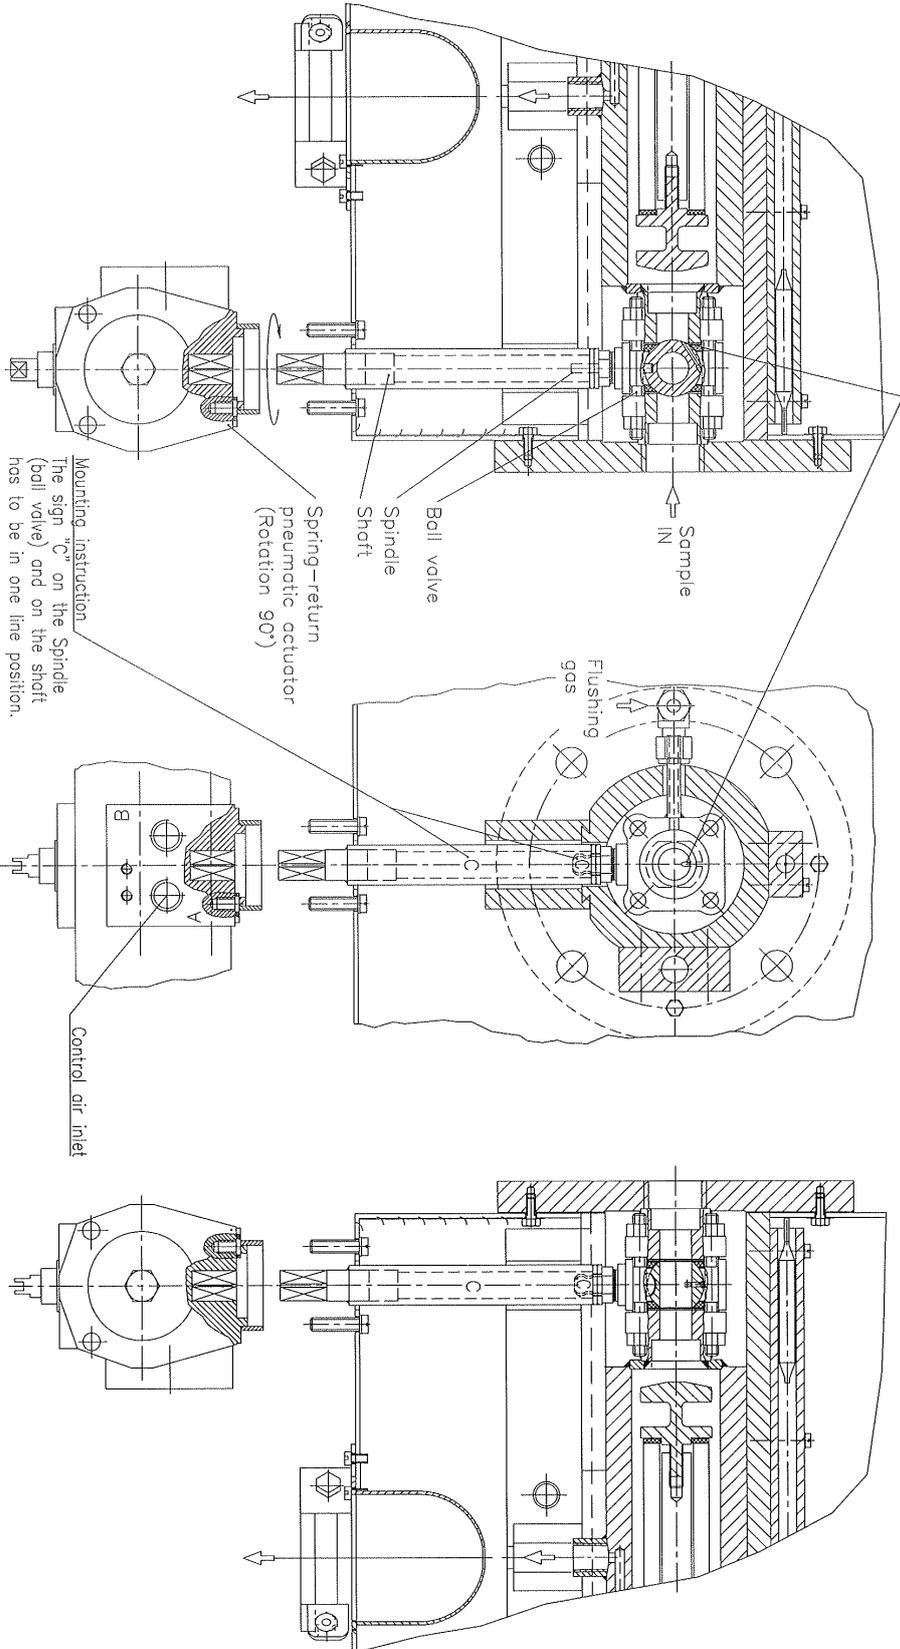

Subject to technical modifications
 Drawing No.: 2255/05/1/02.98

Figure 33 SP2000-H/3VA/MS-NC-C

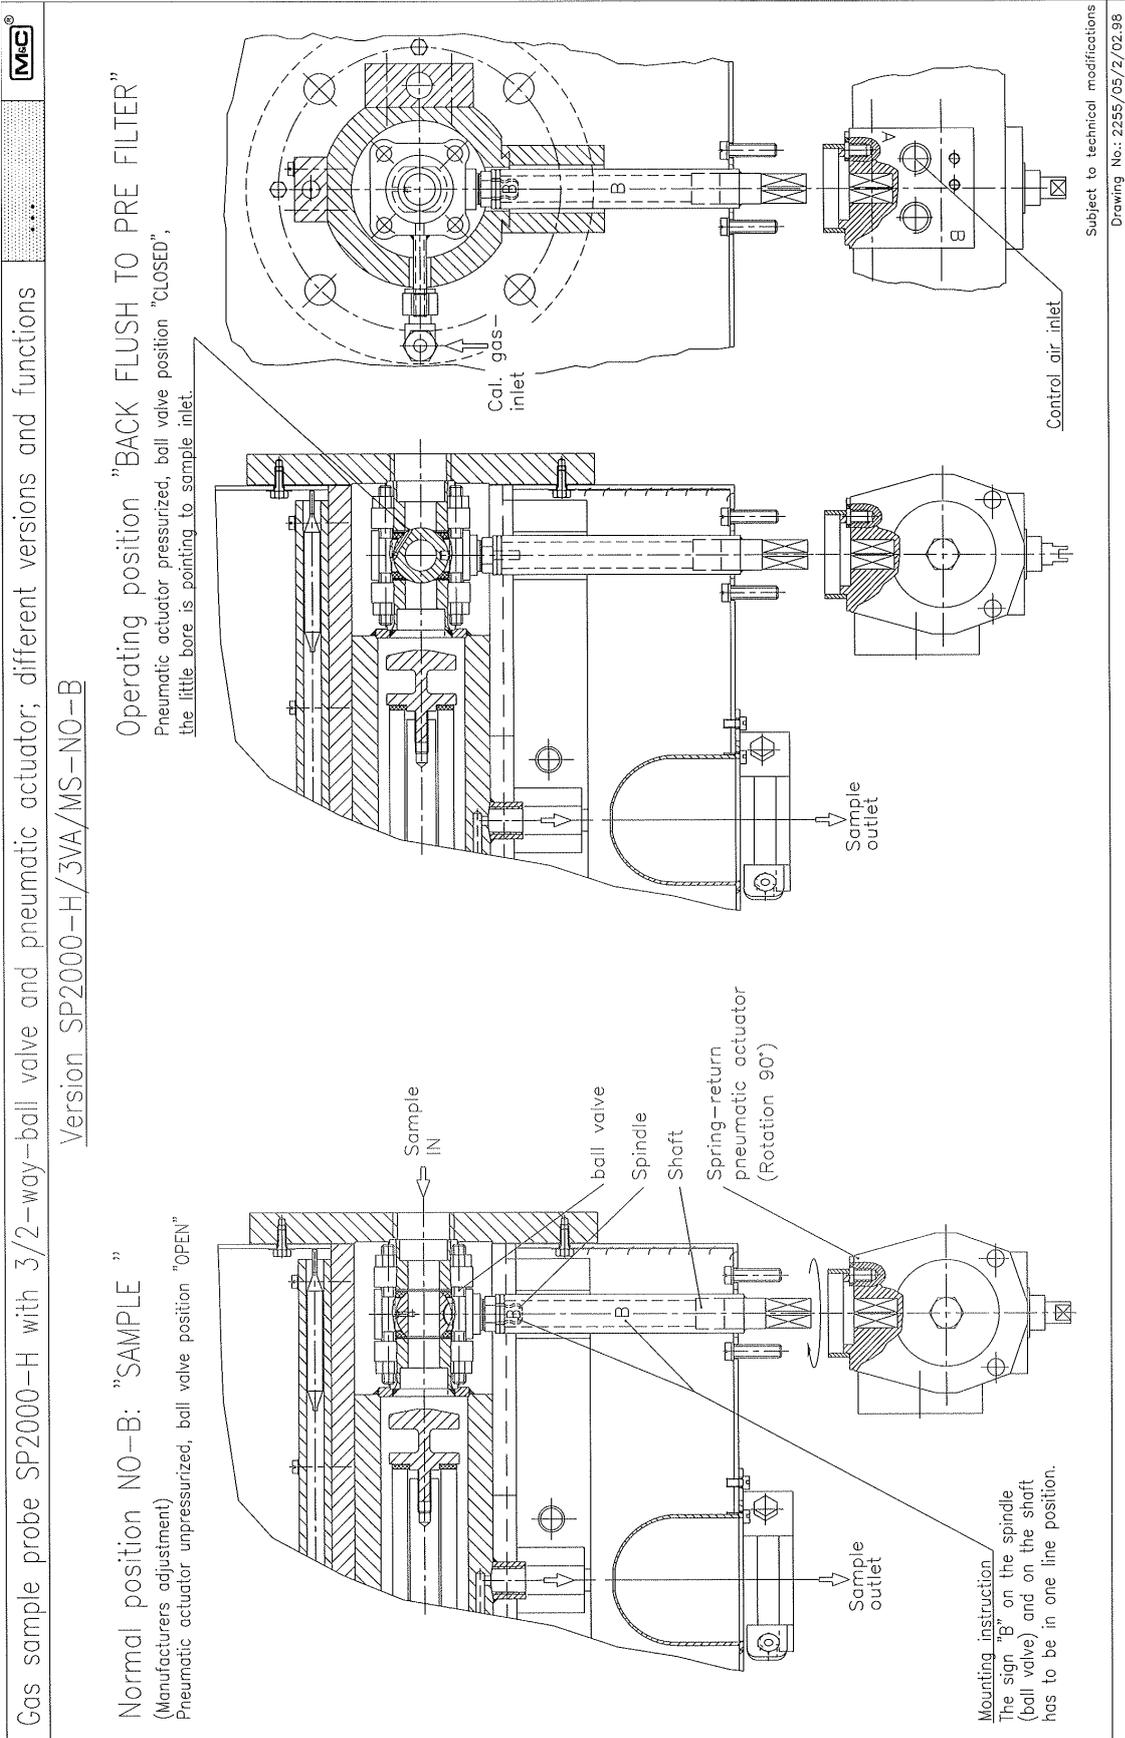


Figure 34 SP2000-H/3VA/MS-NO-B


Gas sample probe SP2000-H with 3/2-way-ball valve and pneumatic actuator, different versions and functions



Version SP2000-H/3VA/MS-NO-C

Normal position NO-C: "SAMPLE"
(Manufacturers adjustment)
Pneumatic actuator unpressurized, ball valve position "OPEN"

Operating position "CAL. GAS or BACK FLUSH TO ANALYSIS"
Pneumatic actuator pressurized, ball valve position "CLOSED",
the little bore is pointing to the filter housing.

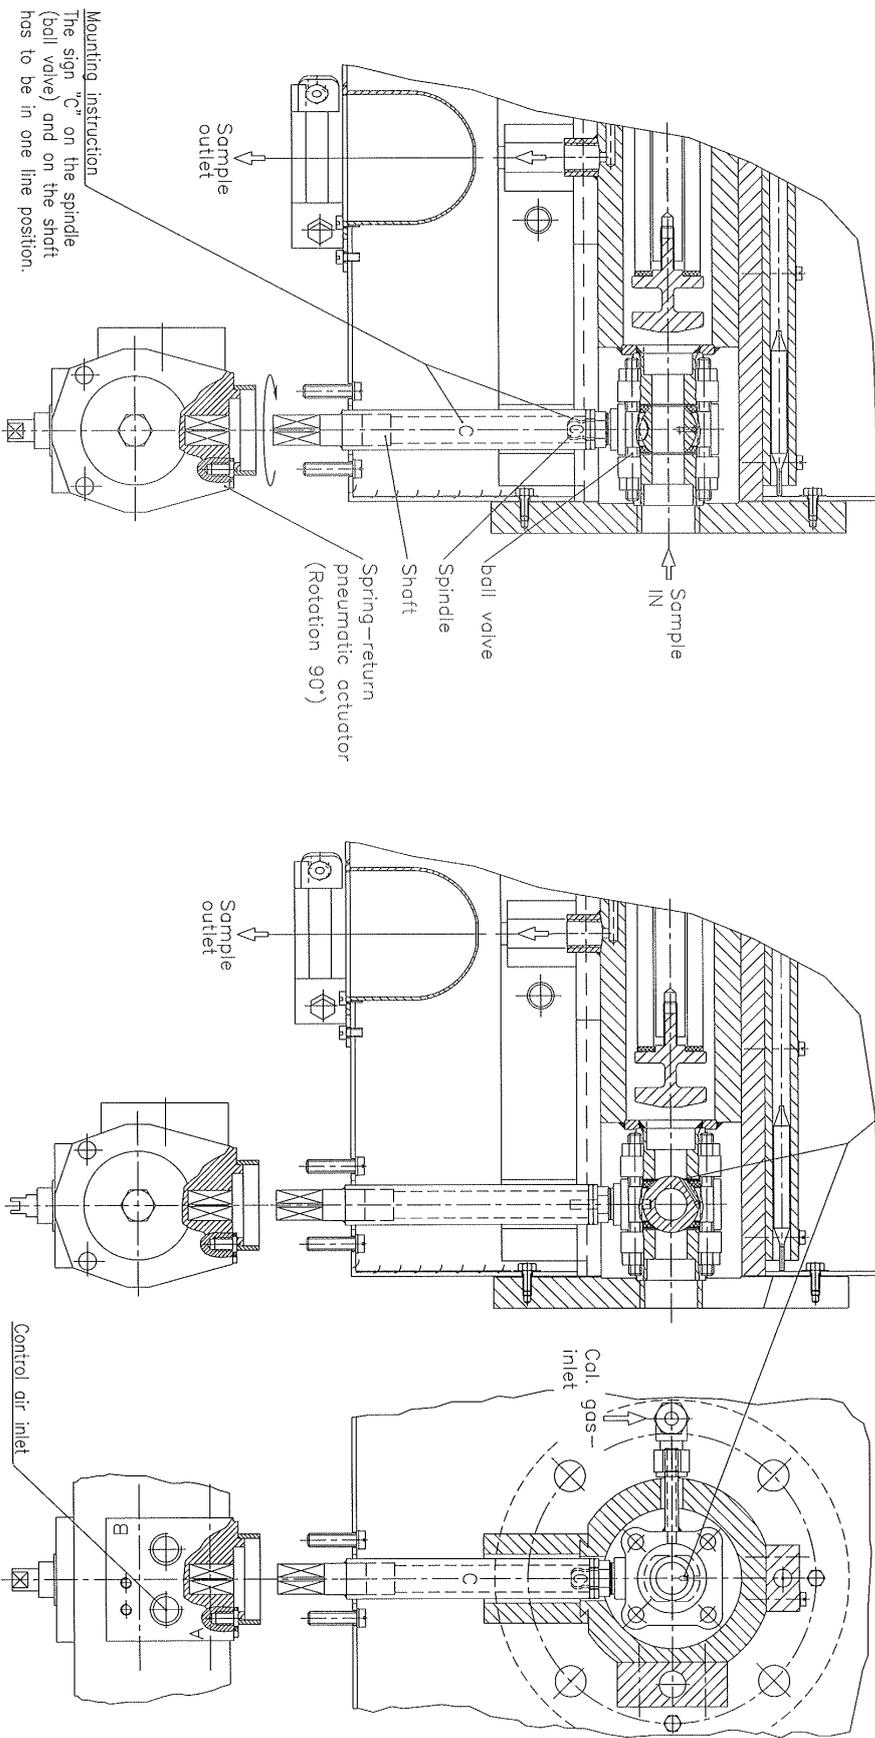

Subject to technical modifications
Drawing No.: 2255/05/3/02.98

Figure 35 SP2000-H/3VA/MS-NO-C